


Trainings ▾

Remove

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

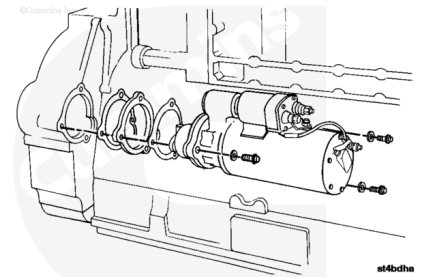

Remove the starting motor capscrews, the starter, spacers, and gaskets.

Discard the gaskets.


Note : Some engines do not use spacers and gaskets.

Clean and Inspect for Reuse

Powerpack

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

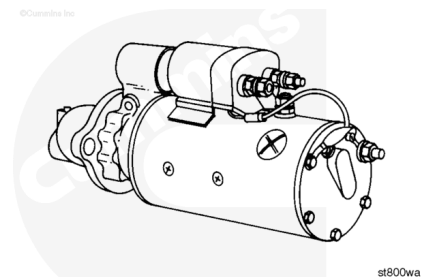

Clean the exterior of the starting motor with steam.

Inspect the gear, shaft, and the bushing for wear or damage.

Lubricate the bushing with clean engine oil.

Note : A pipe plug must be removed to lubricate the bushing on some starter motors.

Install

Note : Some engines do not use spacers.

Install any spacers or gaskets.

Install the starting motor and capscrews.

Tighten the capscrews.

Torque Value: 279 n•m [206 ft-lb]

