


## Trainings ▾

### Remove


Select the appropriate Allen wrench or socket and remove the plug.

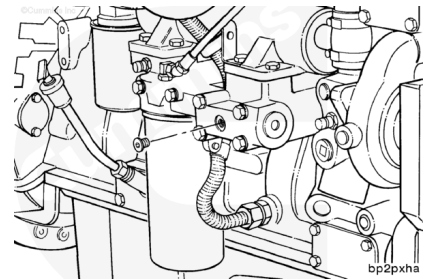

### Clean

#### **⚠ WARNING ⚠**

**When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.**

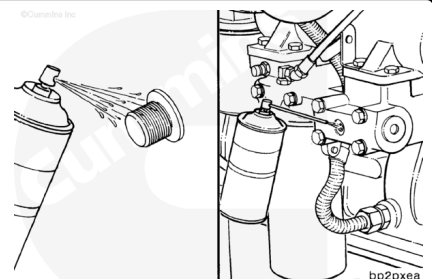

#### **⚠ WARNING ⚠**


**Some solvents are flammable and toxic. Read the manufacturer's instructions before using.**

Use spray cleaner, Part Number 3824510, or equivalent, to clean the threads of the straight-thread plugs and threaded bores.

### Inspect for Reuse


Inspect the threads of the plug for mutilation or damage.

Inspect the threaded bores for damage.  
Repair the bores, if necessary.

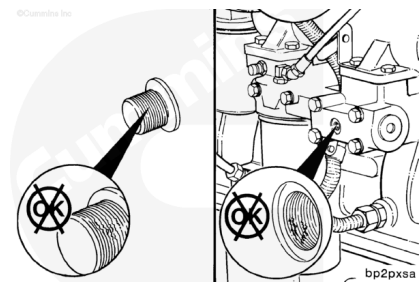

# Install

Install a new o-ring on the plug.  
Lubricate with clean SAE 15W-40 oil.  
Install and tighten the plugs.  
If the torque value is **not** specified, refer to the following chart for torque values:

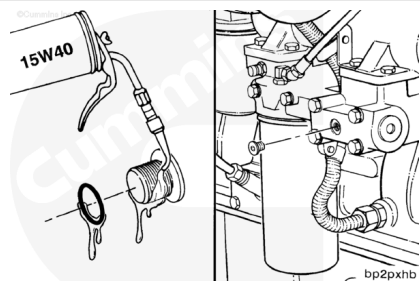

Tighten straight-thread plugs to the appropriate torque value.

| Thread Size | Torque (N•m) | Torque (ft-lb) |
|-------------|--------------|----------------|
| M8          | 8            | 71 [in-lb]     |
| M10         | 15           | 133 [in-lb]    |
| M12         | 25           | 18             |
| M14         | 35           | 26             |
| M16         | 40           | 30             |
| M18         | 45           | 33             |
| M22         | 60           | 44             |
| M27         | 100          | 74             |
| M33         | 160          | 118            |