

Trainings ▾

Cylinder Block


Tool Number

3164438

Depth Gauge Assembly

Used to measure cylinder liner protrusion and cylinder liner counterbore ledge angle.

©Cummins Inc

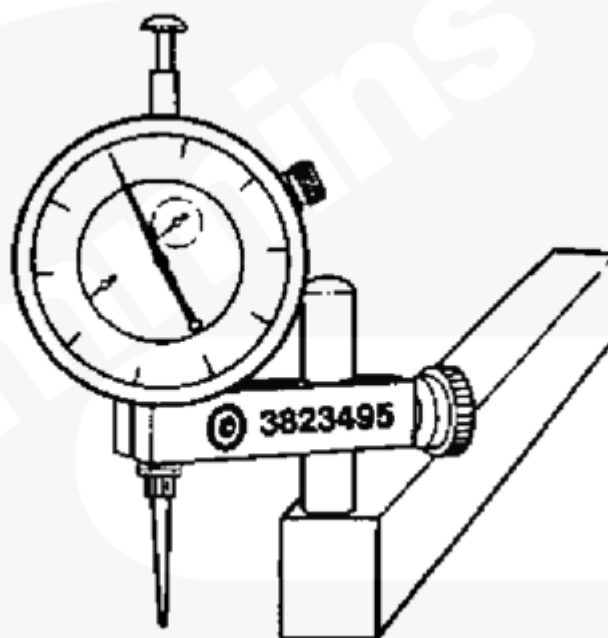

3823495


Tool Number

ST-647

Puller

Used to remove the alternator and accessory drive pulleys.

©Cummins Inc

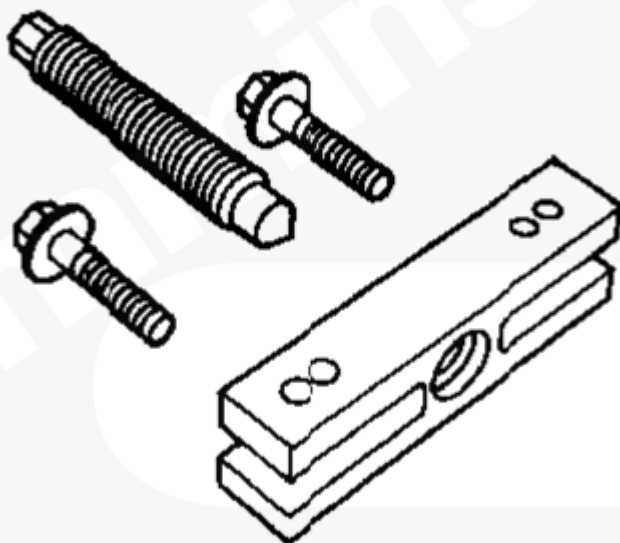

ad8toga

Tool Number


3163720

Dowel Pin Extractor

Used to remove dowel pins and crosshead guides.

© Cummins Inc.

© Cummins Inc.

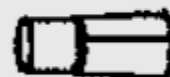

ck8toge



Tool Number

ST-1232

Drill Ream Fixture

Machine dowel hole used to install oversize dowels in cylinder block and flywheel housing. Use with a drill, reamer, and the appropriate drill/ream bushing set.

©Cummins Inc

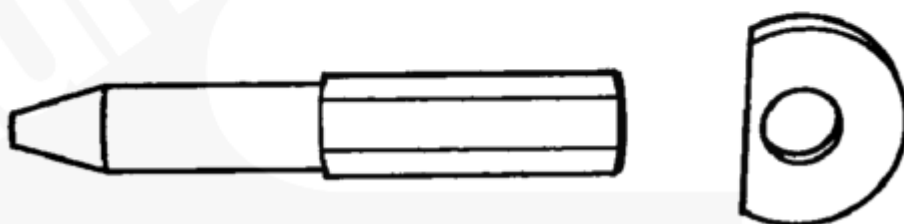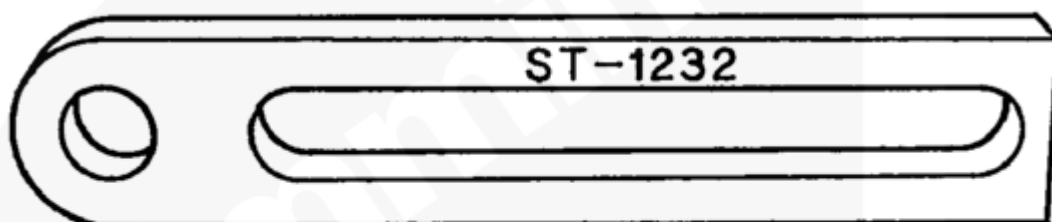

st-1232


Tool Number

3164401

Piston Ring Expander

Used to install piston rings on the piston without damaging or distorting the rings.

©Cummins Inc

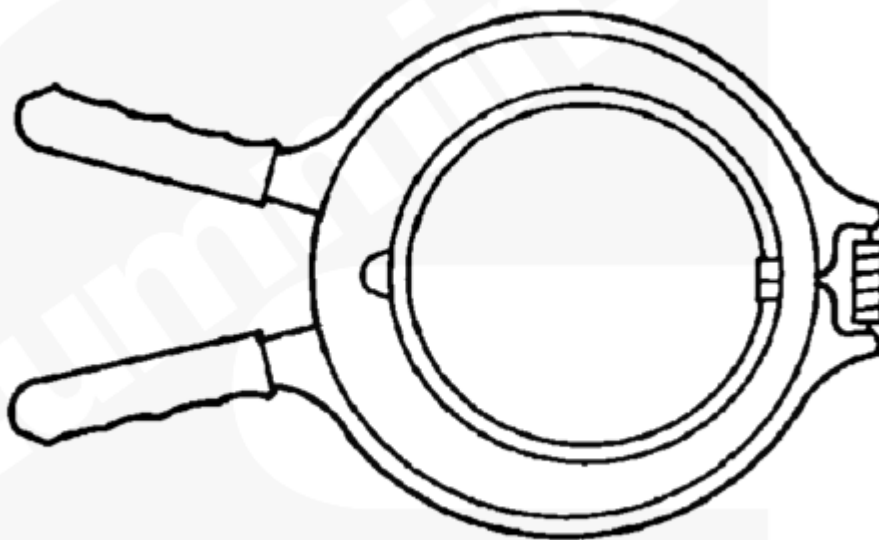

pi8togd


Tool Number

3164207

Liner Installation Tool

Used to install cylinder liner in the engine.

©Cummins Inc

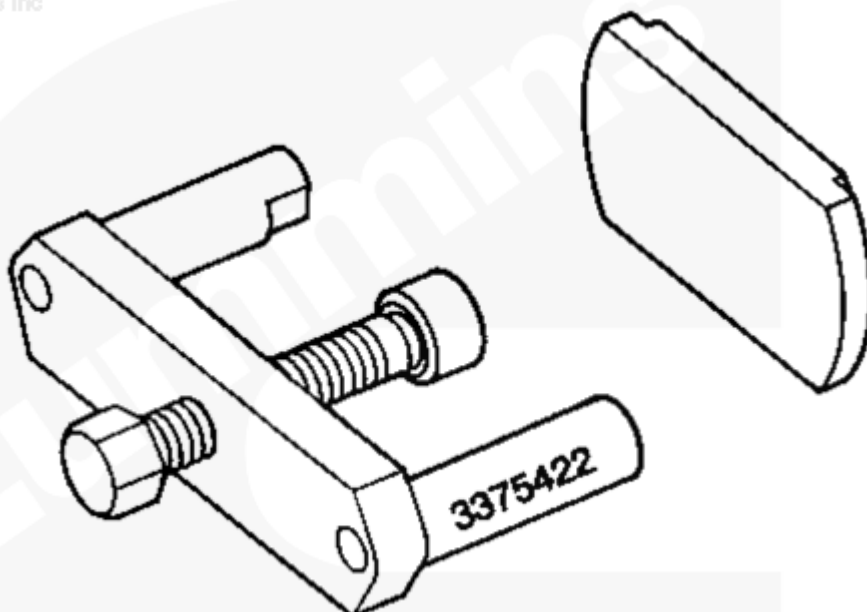

3375422


Tool Number

3375432

Crack Detection Kit

Used to check for cracks in any engine component. Contains cleaner, developer, and penetrant.

©Cummins Inc

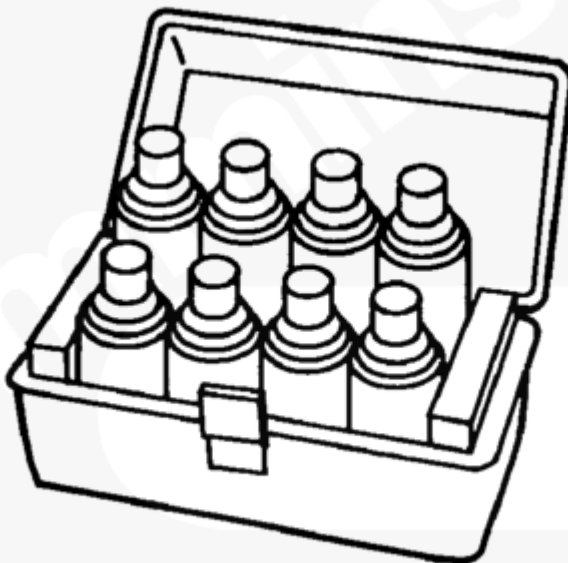

bp8togj


Tool Number

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

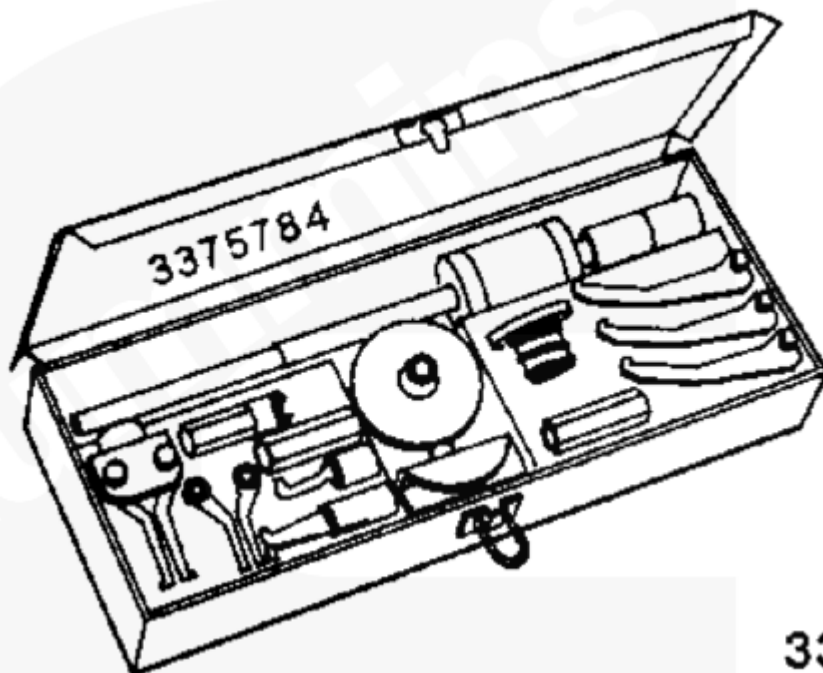

3375784


Tool Number

3165049

Puller Assembly

Used to remove the front crankshaft gear from the crankshaft. Use with the puller jaw, Part Number 3375835.

©Cummins Inc

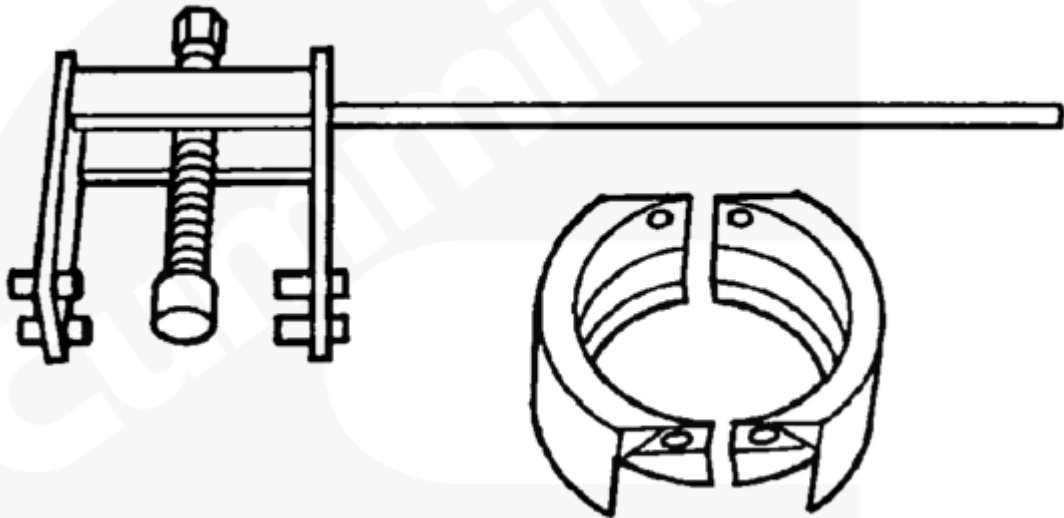

ks8togd


Tool Number

3163745

Cylinder Liner Puller

Used to remove cylinder liner from engine. Use with puller plate, Part Number 3163751.

©Cummins Inc

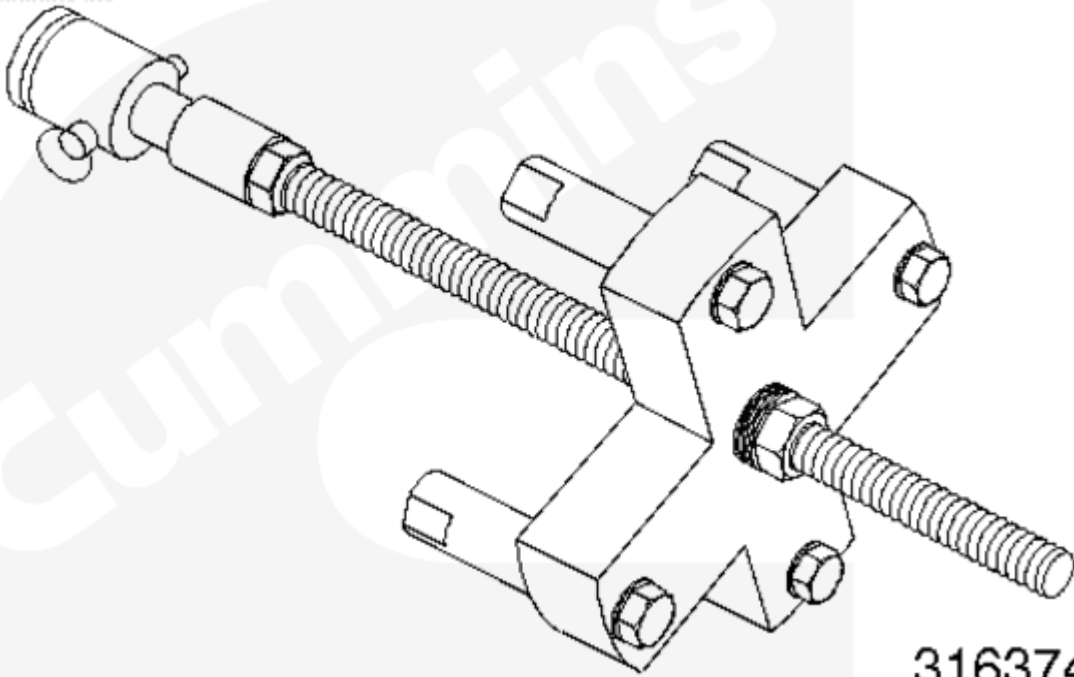**3163745**


Tool Number

3823494

Cummins Sealant

Used to prevent coolant or oil leaks. This is one part room temperature vulcanizing (RTV) silicone rubber, adhesive, and sealant material having high heat and oil resistance, and low compression rate.

©Cummins Inc

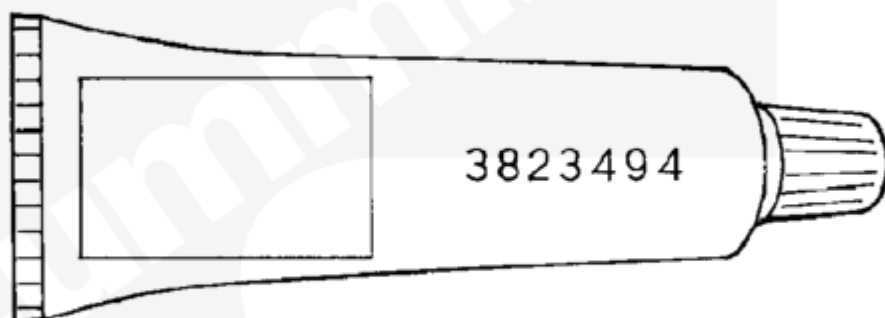**3823494**


Tool Number

3823621

Camshaft Bushing Tool Hydraulic Actuator Kit

Used with hydraulic ram force to install/remove cam bushings when used with installation/removal kit.

©Cummins Inc

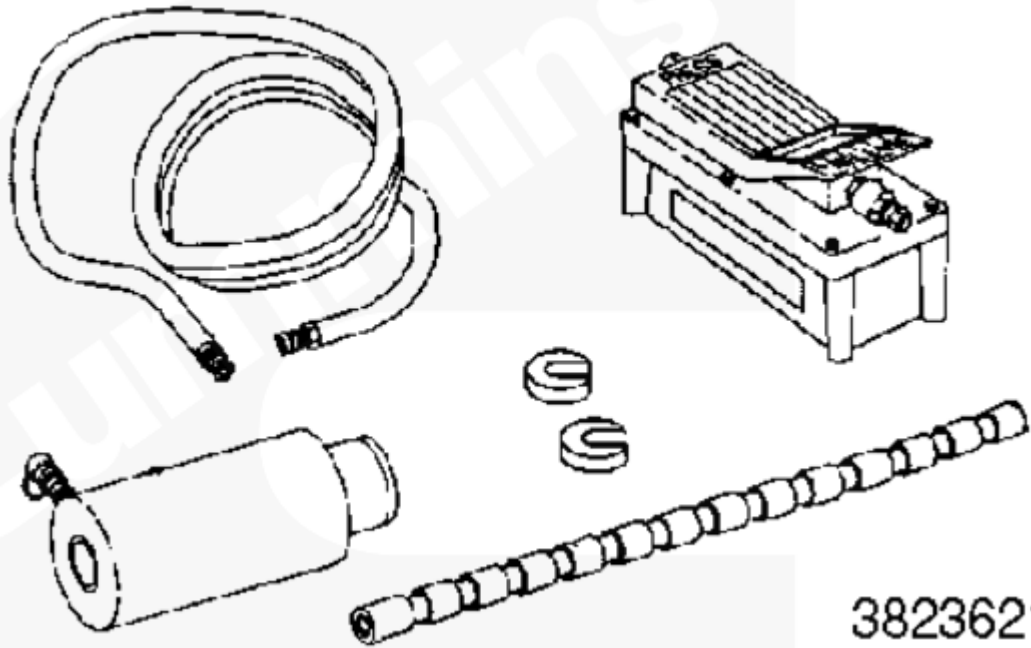

3823621


Tool Number

3163015

Camshaft Bushing Installation/Removal Kit

Used with the Camshaft Bushing Hydraulic Actuator Kit, Part Number 3823621, to remove the camshaft bushing.

©Cummins Inc

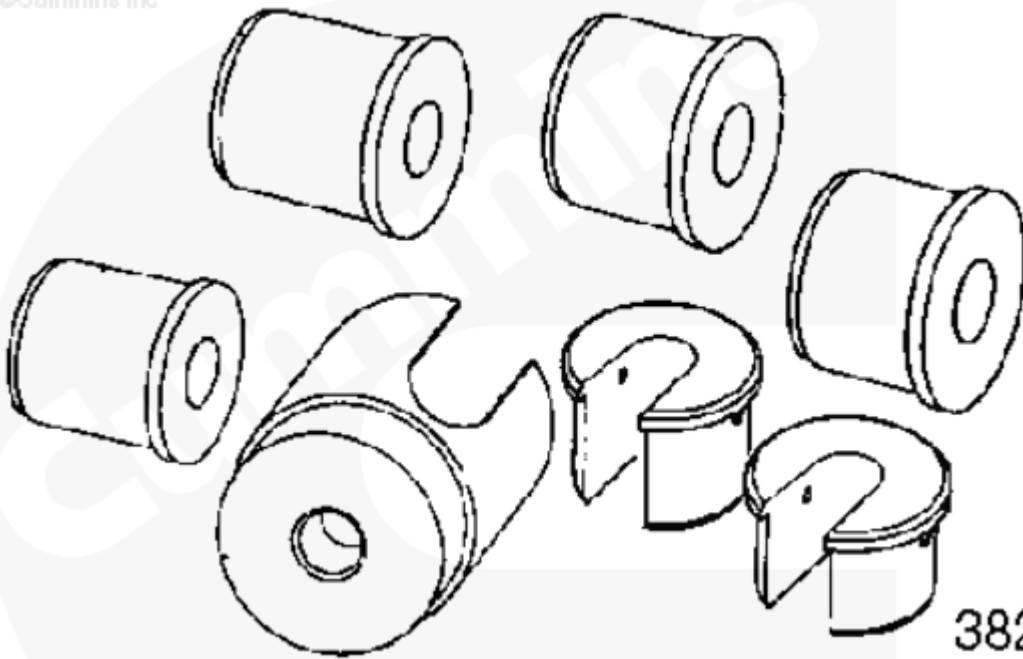

3824842


Tool Number

3164067

Loctite® 5699 RTV Sealant

Loctite® 5699 grey RTV sealant (1, 2) is used to provide a seal.

©Cummins Inc

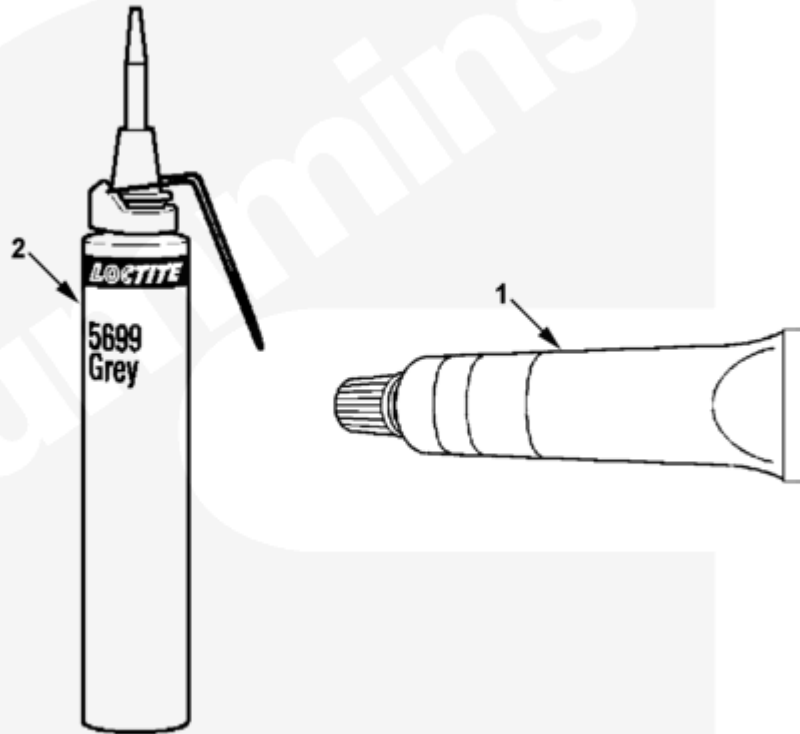

3164067


Tool Number

3164610

Camshaft Removal and Installation Kit

Used to install the camshaft without damaging the camshaft bushings or camshaft. Use with the Camshaft Pilot Kit, Part Number 3164845.

©Cummins Inc

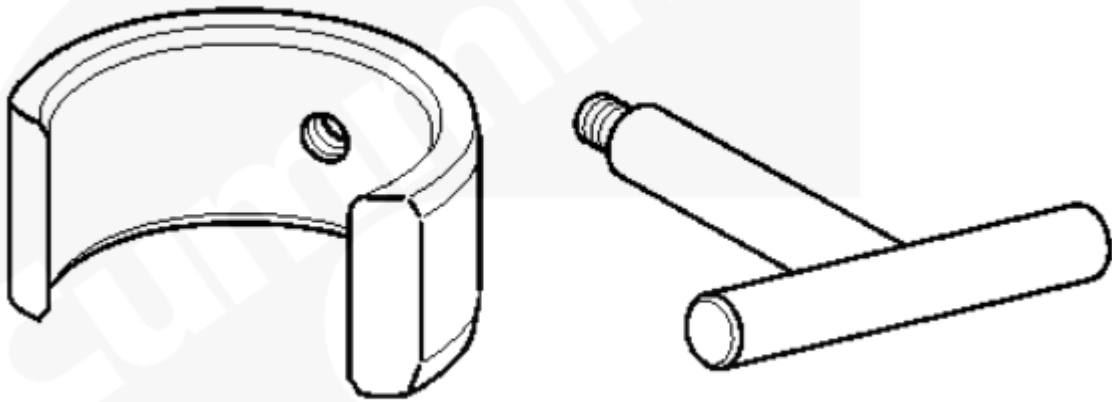

22400187


Tool Number

3164375

Hydraulic Camshaft Gear Remover Kit

Use with camshaft and crankshaft gear remover kit, Part Number 3164378, air/hydraulic pump, Part Number 3823622, and hydraulic hose, Part Number 3823624.

©Gummine Inc

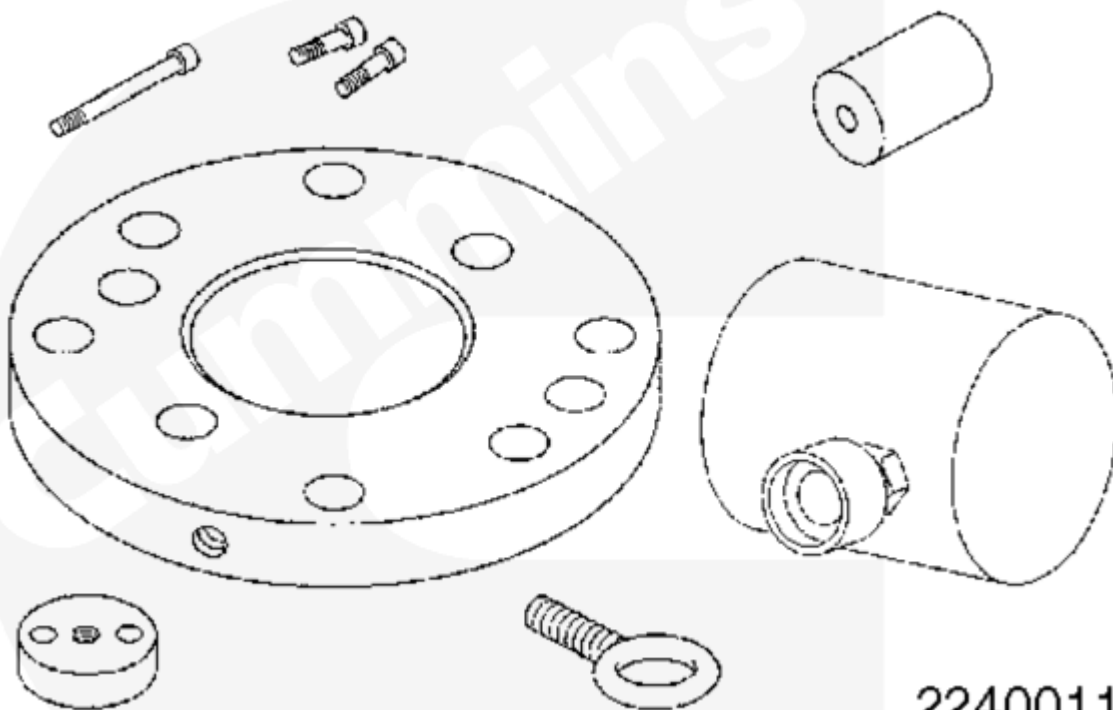

22400113


Tool Number

3164845

Camshaft Pilot Kit

Used to install the camshaft without damaging the camshaft bushings or camshaft. Use with the Camshaft Removal and Installation Kit, Part Number 3164610.

©Cummins Inc

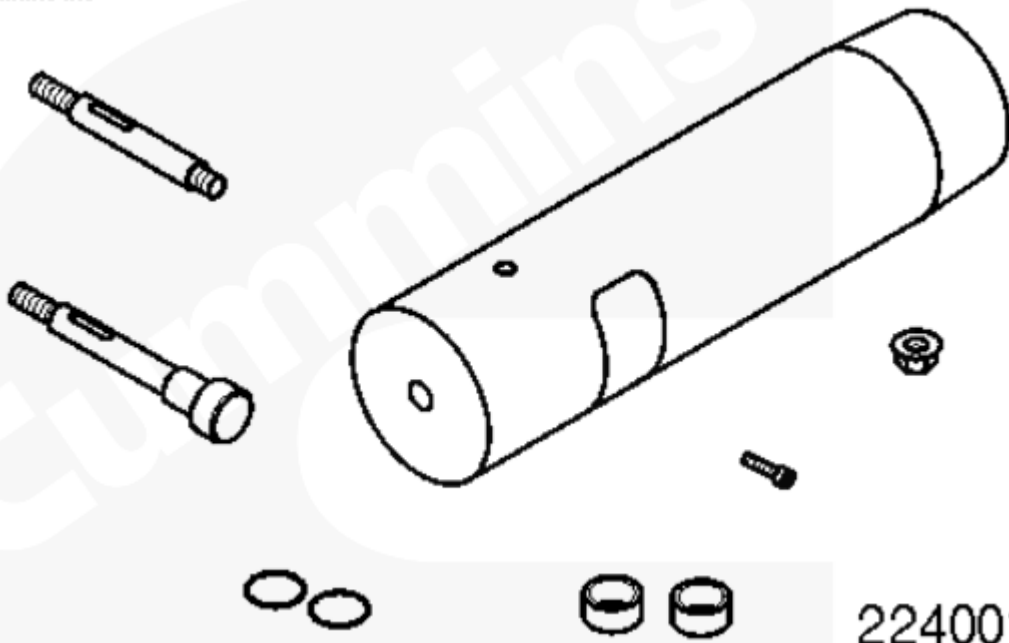

22400186


Tool Number

3823818

Main Bearing Roll-out Tool

Used to remove upper main bearing shell.

©Cummins Inc

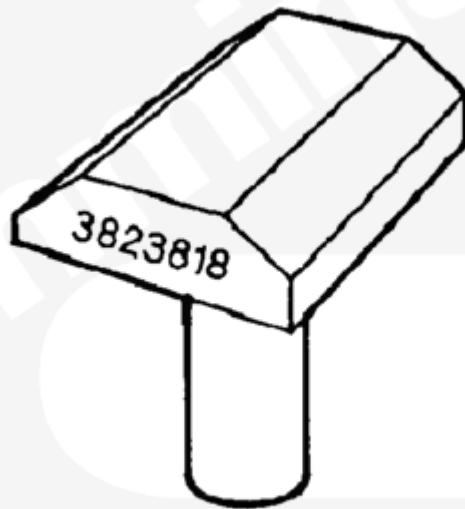

3823818


Tool Number

ST-1116

Main Bearing Cap Puller

Used to remove the main bearing caps.

©Cummins Inc

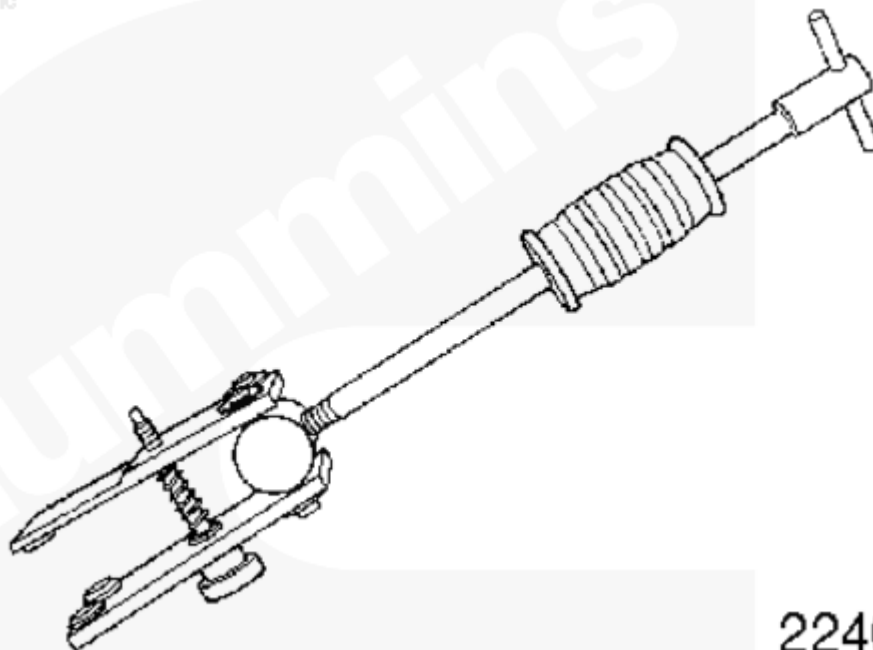


22400188

Tool Number

5298540

Crankshaft Seal Replacer Kit

Used to remove/install the rear crankshaft seal.

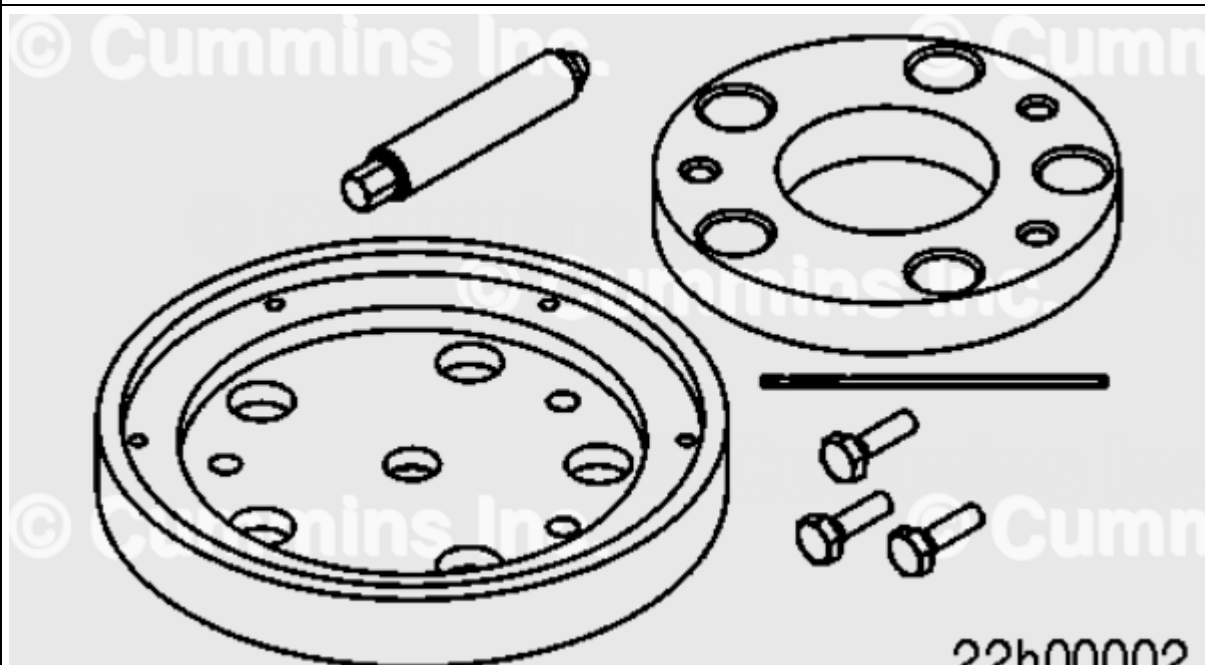

22h00002

