

Trainings ▾

General Information

The vessel can be equipped with a remote keypad to control the operations of the display. The remote keypad is typically an optional component for interfacing with the display ED-5/ED-7 through SAE J1939 data link. The remote keypad will provide the ability to control touchscreen function of the display.

The mounting studs for installation and device interface connections are on the bottom of the device used to interface with display adapter harness.

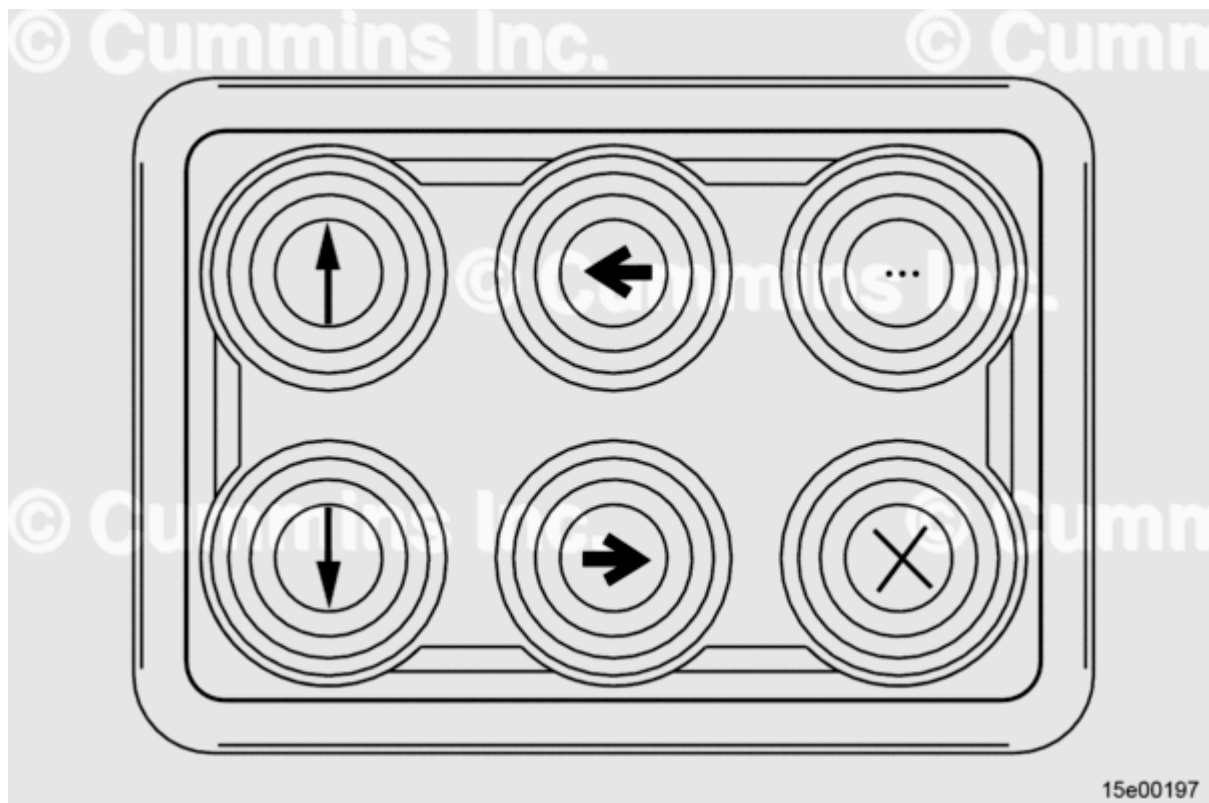


Figure 1, Front of the Remote Keypad

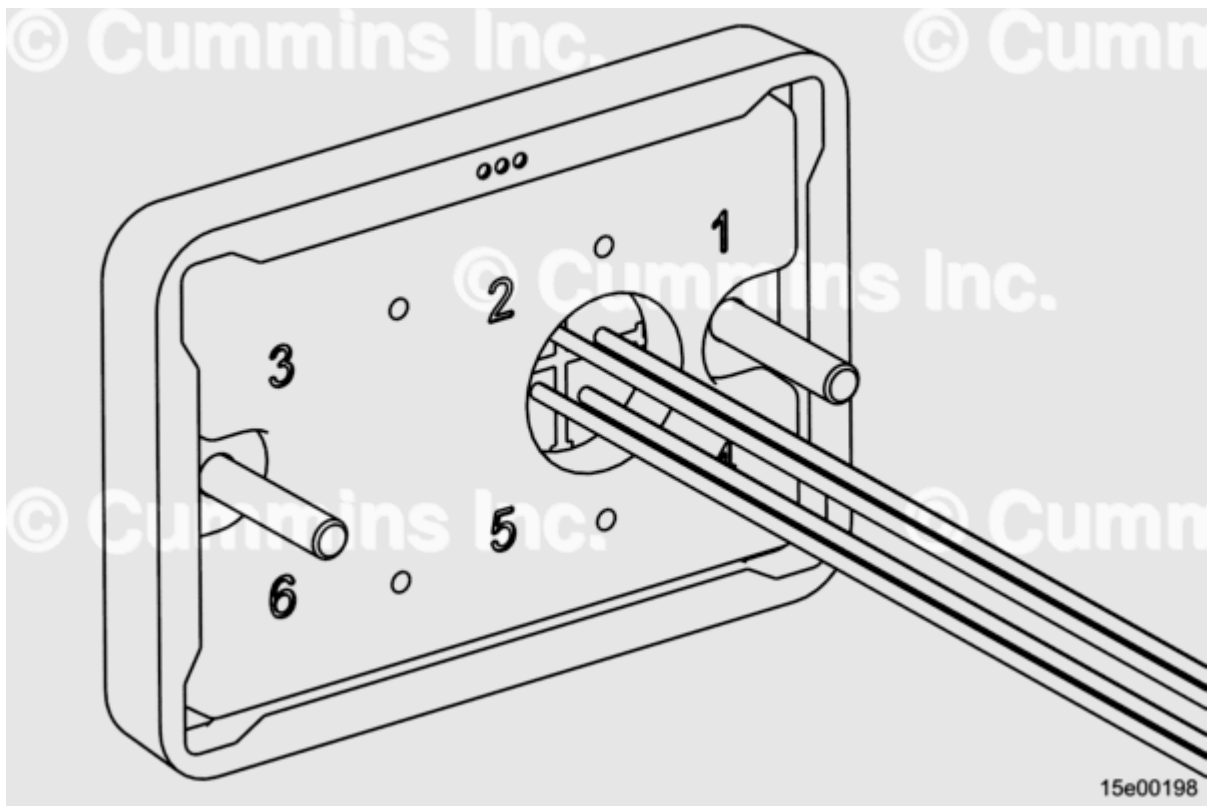


Figure 2, Rear of the Remote Keypad

The remote keypad comes pre-programmed with software and configuration file and requires selection from the display menu. The remote keypad also has internal backlight LEDs that can be controlled through the display menu. The remote keypad field programming is **not** supported.

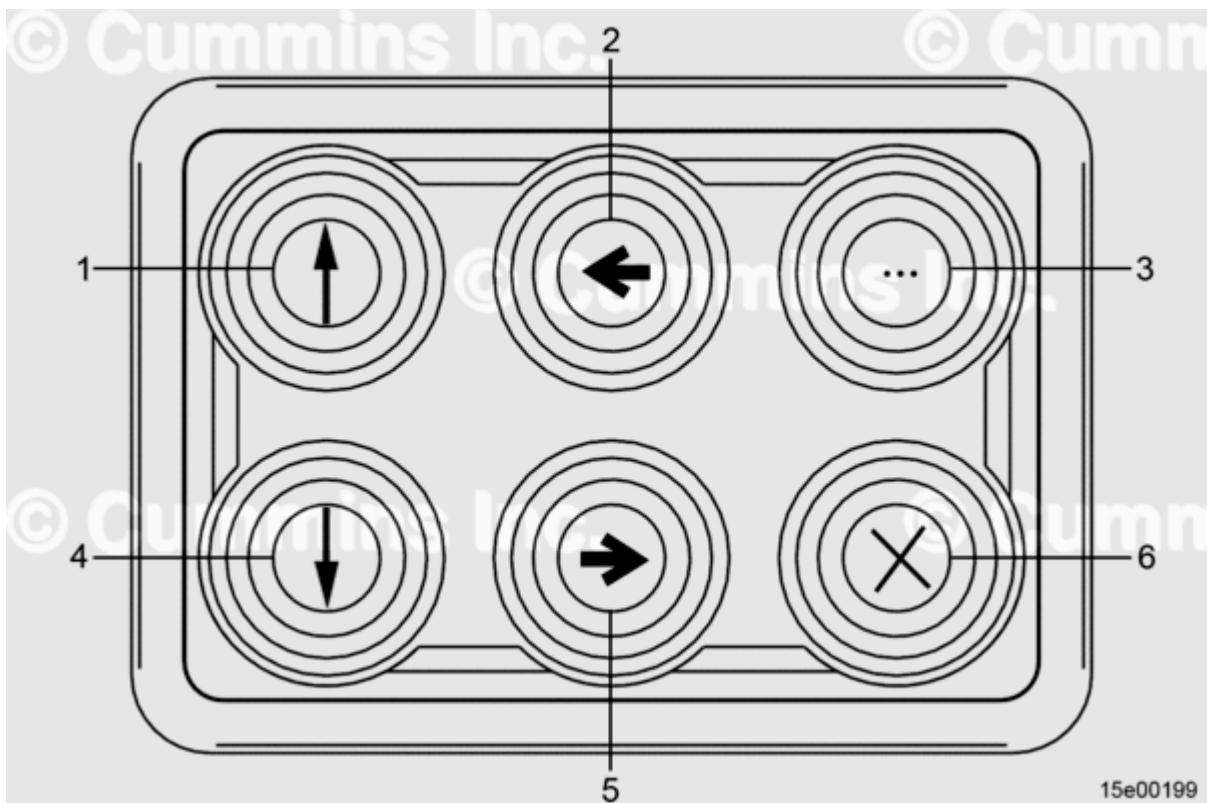


Figure 3, Key Selection on Remote Keypad

1. Key 1 (Up) - Press key 1 to scroll up.

2. Key 2 (Left) - Press key 2 to scroll left or adjust the values in the menu options.
3. Key 3 (Enter / Select) –
 - Press key 3 once to enter the screen editor page.
 - Press and hold key 3 to enter the Menu page.
 - When scrolling through Menu options, press key 3 to select the menu value.
4. Key 4 (Down) - Press key 4 to scroll down.
5. Key 5 (Right) - Press key 5 to scroll right or adjust the values in the menu options.
6. Key 6 (Return / Exit) –
 - Press key 6 to exit screen prompts, screen editor, menu page or to go back to previous menu level.
 - Press key 6 to access alarm information when on the main data screen.

The other operation supported from remote keypad is by press and hold key 1 and key 4 to access the soft keys “Menu”(I), “Backlight” (II), “Alarm”(III). When the soft key function on the display screen is highlighted with a yellow box, press key 3 (Enter / Select) to select the button function.

The remote keypad once installed needs identification on the display, the remote keypad identification can be done by settings in the menu.

Action:

- Select “NMEA Switch Bank” using the touch screen.
- Select “Default Keypad” using the touch screen.
- Select “PKU2300M” using the touch screen.
- Select “Identify” to confirm the display is communicating with the remote keypad. The remote keypad will start blinking LEDs if communication is active.

When finished:

- Swipe left to right or use “Back”(IV) soft key on the screen to exit.

The remote keypad has backlight LEDs configurable with different lighting mode available as:

- Off: LEDs remain off all the time.
- On: LEDs remain on all the time.
- On at low brightness: LEDs **only** light up when display backlight is lower than 20 percent or equal to 20 percent.
- On at high brightness: LEDs **only** light up when display backlight is above 20 percent.
- **Not** controlled: LEDs remain off all the time and is **not** controlled by the display backlight level.

Action:

- Select “Menu”.
- Select “Security”, enter valid security PIN.
- Select “Back”(IV) soft key on the screen to exit.
- Select “Setup”.
- Select “NMEA Switch Bank”.
- Select “Default Keypad”.
- Select “PKU2300M”.

- To adjust the lighting threshold for remote keypad backlight LEDs control, set the "Lighting Threshold" to desired display backlight level percentage.
- Select "Lighting Mode".
- Select the mode per the application needs.

When finished:

- Swipe left to right or "Back"(IV) soft key to exit the page.

Preparatory Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.

Remove

Remove the display adapter remote keypad interface, from the bottom of the remote keypad.

Remove the wingnuts that secure the remote keypad to the helm.

Remove the keypad.

Install

Install the remote keypad to the helm.

Install the wingnuts that secure the remote keypad to the helm. Tighten by hand.

Connect the display adapter harness remote keypad interface to the adapter on the bottom of the remote keypad.

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.