

Trainings ▾

General Information

The following system indicator lamps cover **only** the lamps shown on the ED-4/ED-5/ED-7 display. The vessel manufacturer can provide additional indicator lamps. See equipment manufacturer service information for additional lamp information.


The ALARM BELL lamp illuminates to indicate a system fault condition that may require action.

Note : Reference the alarm pop up message on the ED-4/ED-5/ED-7 display for instructions.

The lamp is amber or red, and can look like:

- A symbol of a bell, similar to the graphic illustrated.

The lamp will turn off if no fault condition exist.

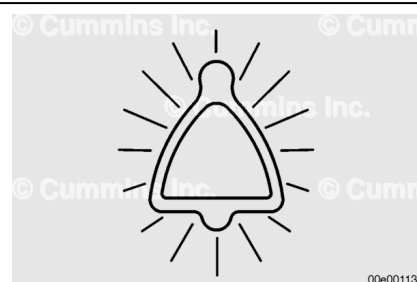


PS103/PS108

The lamp can look like:

- A flashing symbol of a bell, similar to the graphic illustrated.

The lamp will turn off if no fault condition exist.

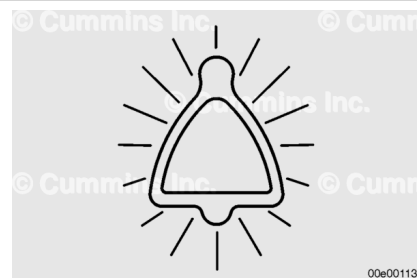

Engine Protection Shutdown (EPS) Override Switch Indication

- A symbol of an engine with "EPS", similar to the graphic illustrated.

Visual Indication provided when Override Switch is used with an active Engine Protections shutdown condition.

