

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Seal installation tool, Part Number 5573257
- Seal installation tool, Part Number 5573258

Additional Service Items

- No additional service items required.

General Information


This procedure is to remove and install the press fit style accessory drive seal. There is an older seal which uses three capscrews for installation which is **not** discussed in this procedure.

Preparatory Steps

- Remove the accessory drive pulley. Refer to Procedure 009-004 in Section 9. (</qs3/pubsys2/xml/en/procedures/56/56-009-004-tr.html>)


Remove

The rotational part of the seal is removed from the shaft and gear housing when removing the pulley. This **must** be removed from the pulley and discarded.

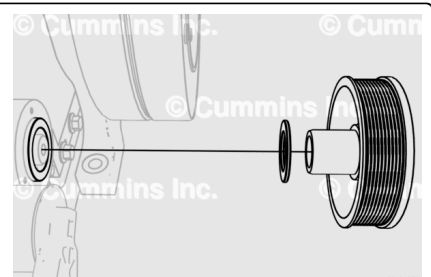

Remove and discard the stationary part of the seal assembly from the gear cover and shaft.


Remove the spacer from the end of the shaft.

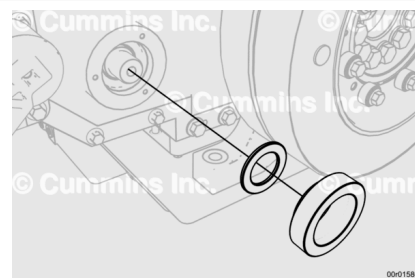

Install

Separate the rotational and stationary part of the seal.

Locate the stationary part of the seal on the end of the seal installation tool, Part Number 5573257.

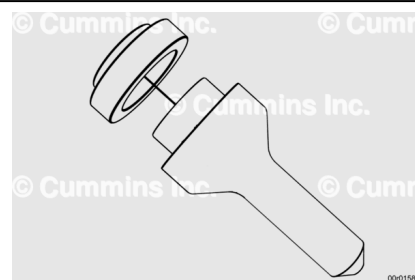


Put the spacer on the shaft.

Slide the tool on to the end of the shaft.

Tap the end of the installation tool with a mallet to push the stationary part of the seal into the gear housing.


The spacer **must** be installed, or the seal will **not** locate correctly.

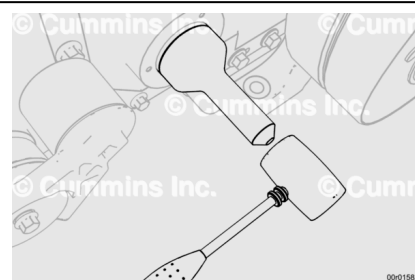

Place the rotational part of the seal on top of the pulley shaft.

Use seal installation tool, Part Number 5573258 to install the seal on to the pulley with the aid of a mallet.

Note : If you are moving from an older style seal that utilizes three bolts for installation to the new seal a new design pulley **must** also be purchased.

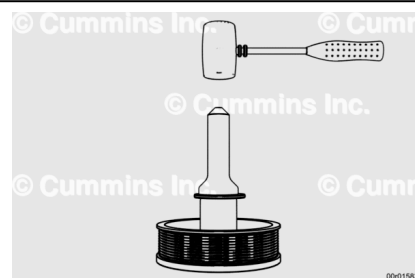

Finishing Steps

- Install the accessory drive pulley. Refer to Procedure 009-004 in Section 9.
(</qs3/pubsys2/xml/en/procedures/56/56-009-004-tr.html>)

Last Modified: 22-Apr-2021
