


Trainings ▾

Remove

Remove the four rear crankshaft seal mounting capscrews.

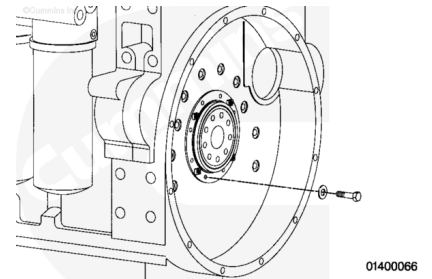

Remove and discard the rear crankshaft seal from the flywheel housing. Use the Front and Rear Crankshaft Seal Installation and Removal Tool Kit, Part Number 3163349.

