

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To reduce the possibility of serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

- Remove the transmission, clutch, and all related components. See equipment manufacturer service information.
- Remove the flywheel. Refer to Procedure 016-005 in Section 16. (</qs3/pubsys2/xml/en/procedures/56/56-016-005-tr.html>)




Remove

Remove the four rear crankshaft seal mounting capscrews.

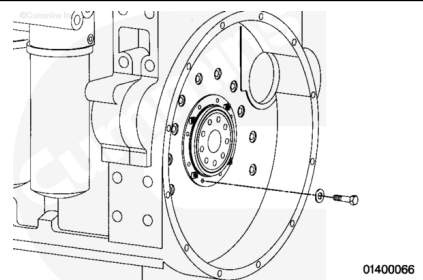


Remove and discard the rear crankshaft seal from the flywheel housing. Use the Front and Rear Crankshaft Seal Installation and Removal Tool Kit, Part Number 3163349.

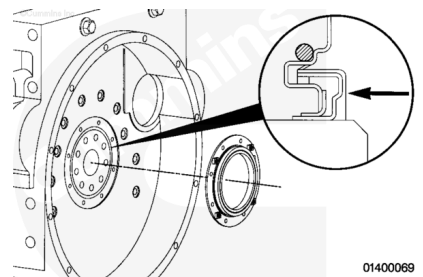

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

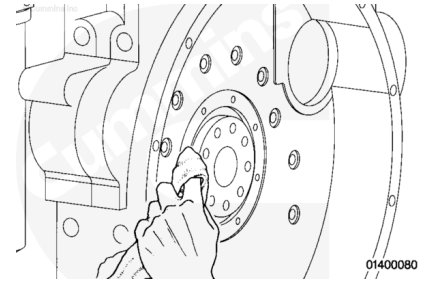

Use a clean cloth and solvent to clean the crankshaft and seal mounting area.

Install

Note : Do not separate the crankshaft seal from the carrier during installation. This could cause damage to the seal faces and scrolls resulting in premature failure of the seal and oil leakage.


Note : The use of a guide pin will make seal alignment more accurate.

Note : Do not remove the seal from its packaging unless you are able to start and finish the installation in one action. Leaving the seal exposed out of its packaging can result in dirt ingress into the seal and result in premature failure of the seal and oil leakage.


Apply a light coating of clean engine oil to lubricate the rear rubber diameter of the seal.

Install the crankshaft seal carrier onto the crankshaft dry. Do **not** lubricate it.

Use hand pressure to push the rear crankshaft seal onto the crankshaft as far as possible.

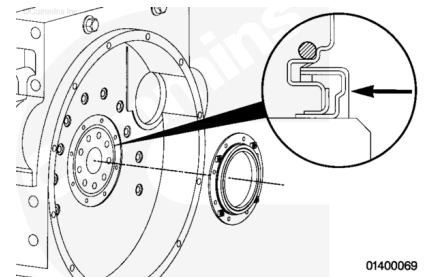


Install the new rear crankshaft seal into the flywheel housing.
Use the Front and Rear Crankshaft Seal Installation and Removal Tool Kit, Part Number 3163349.

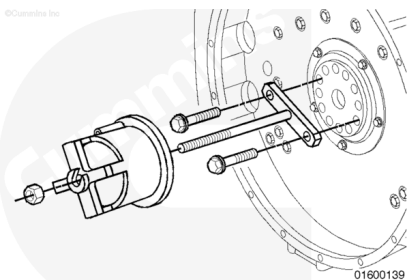

Install the four seal mounting capscrews.

Tighten the capscrews.


Torque Value: 10 n·m [89 in-lb]

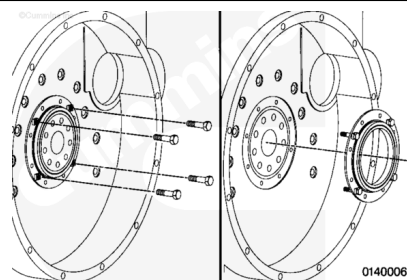

Finishing Steps

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To reduce the possibility of serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

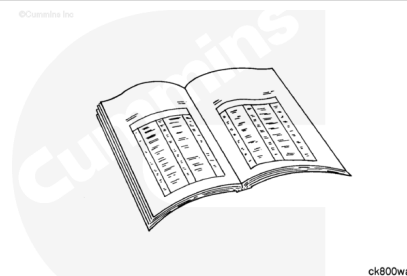

- Install the flywheel. Refer to Procedure 016-005 in Section 16. (/qs3/pubsys2/xml/en/procedures/56/56-016-005-tr.html)
- Install the transmission, clutch, and all related components. See equipment manufacturer service information.
- Operate the engine. Check for leaks.