

Trainings ▾

Install


Standard

Note : For Low NOx emissions capability products, the dipstick hand hole cover is reversed, with dipstick on the left, and filling point on the right. Ensure this is fitted, to prevent interference between the filling cap and Fuel Tubes.

Use the minimum amount of stretch and do **not** allow the o-ring to twist when installing in onto the hand hole cover.

Install a new o-ring into the groove of the hand hole cover.

Lubricate the o-ring seal with clean engine oil.

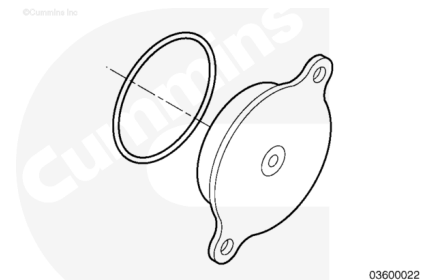

Do **not** pull the hand hole cover into the cylinder block by tightening the capscrews.


Place the hand hole cover into the cylinder block

Turn the hand hole cover until the location holes line up with the mounting holes on the block.

Apply firm pressure, pressing the hand hole cover into place.

Install and tighten capscrews.

Torque Value: 45 n•m [33 ft-lb]

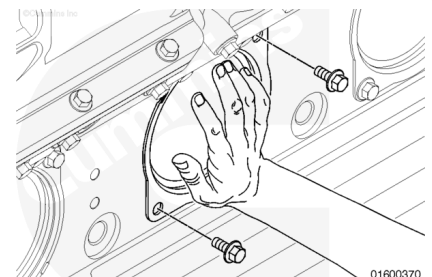


Block Mounted Crankcase Breather

Use the minimum amount of stretch and do **not** allow the o-ring to twist when installing in onto the hand hole cover.

Install a new o-ring into the groove of the hand hole cover.

Lubricate the o-ring seal with clean engine oil.

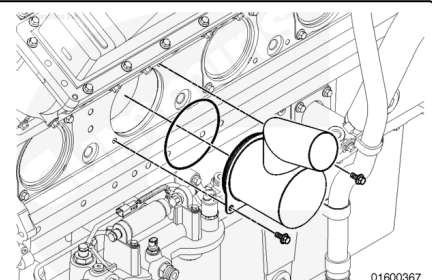

Do **not** pull the hand hole cover into the cylinder block by tightening the capscrews.


Place the hand hole cover into the cylinder block.

Turn the hand hole cover until the location holes line up with the mounting holes on the block.

Apply firm pressure, pressing the hand hole cover into place.

Install and tighten capscrews.

Torque Value: 45 n•m [33 ft-lb]

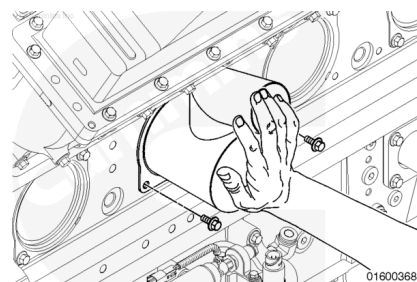


Eliminator™

Use the minimum amount of stretch and do **not** allow the o-ring to twist when installing in onto the hand hole cover.

Install a new o-ring into the groove of the hand hole cover.

Lubricate the o-ring seal with clean engine oil.

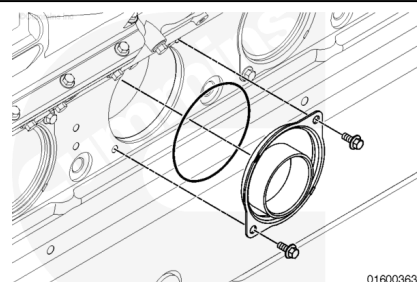

Do **not** pull the hand hole cover into the cylinder block by tightening the capscrews.

Place the hand hole cover into the cylinder block.

Turn the hand hole cover until the location holes line up with the mounting holes on the block.

Apply firm pressure, pressing the hand hole cover into place.

Install and tighten capscrews.

Torque Value: 45 n•m [33 ft-lb]

