

Trainings ▾


Remove

Standard

Remove the hand hole cover capscrews.

Remove the hand hole cover.

Remove and discard the o-ring.

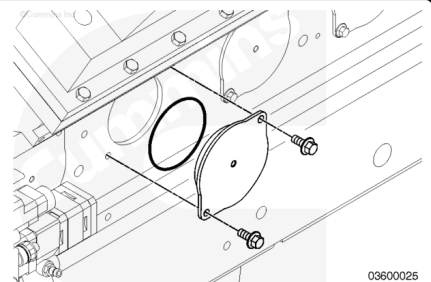


Block Mounted Crankcase Breather

Disconnect the crankcase breather pipe.

Remove the hand hole cover capscrews.

Remove the hand hole cover.

Remove and discard the o-ring.

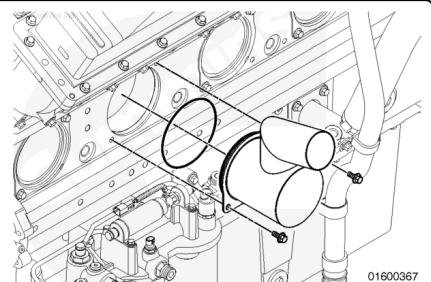

Eliminator™

Remove the hand hole cover capscrews.

Remove the Eliminator hand hole cover. Note the location where installed.

Remove and discard the o-ring.

