



Trainings ▾

Remove

Remove the plug from the center of the block of plate.

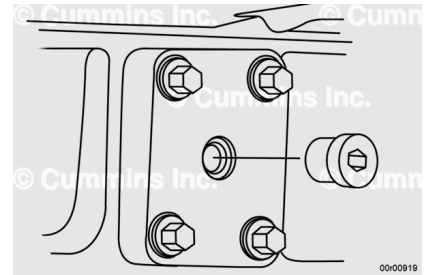


Remove the four capscrews holding the block of plate and discard the gasket.

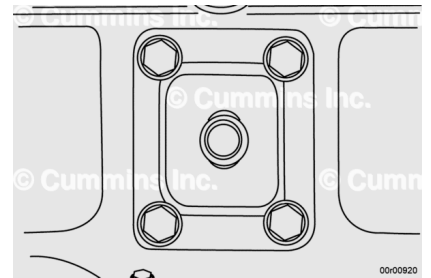

Install


Install a new gasket and four capscrews to the blanking plate.

Torque Value: 46 n•m [34 ft-lb]

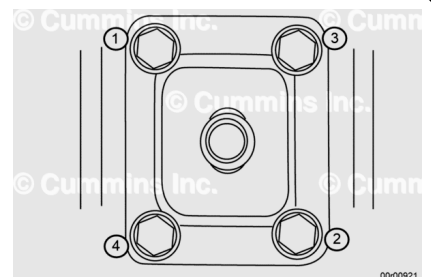

Install plug in to the center of the blanking plate.

Torque Value: 61 n•m [45 ft-lb]

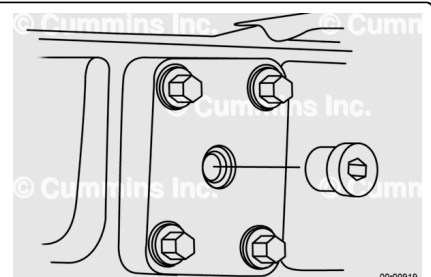

Last Modified: 17-Mar-2021