


Trainings ▾

Remove with Mechanically Actuated Injector

Remove the mounting capscrews from the rocker lever cover.


Remove the rocker lever cover and gasket.

Discard the gasket.

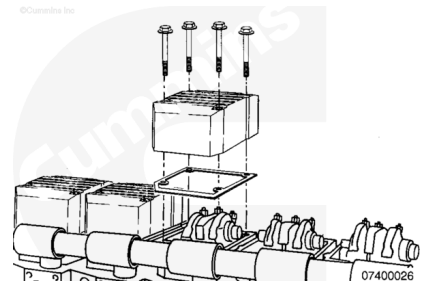


with Electronically Actuated Injector


Disconnect the electrical connectors for the injector and exhaust gas temperature sensor.

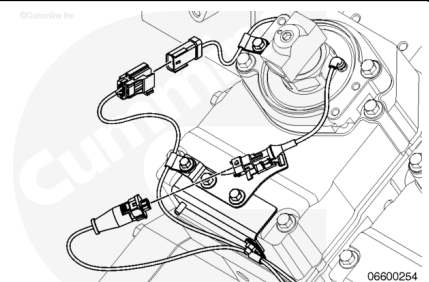


Remove the two P-clips securing the wiring harness to the rocker lever cover.

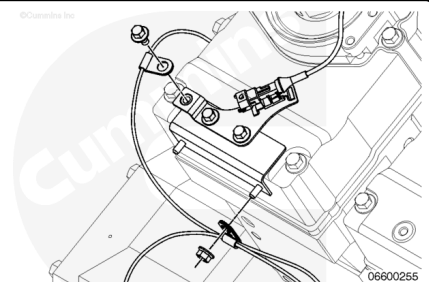


Remove the injector wiring harness from the rocker cover bracket by using a small flat tip screwdriver to release the locking mechanism.

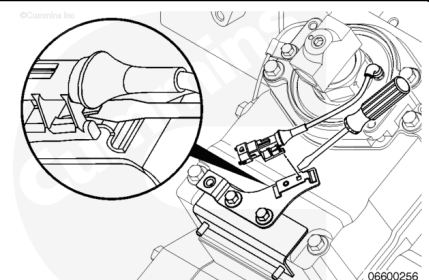


Remove the two capscrews securing the two brackets to the rocker lever cover and remove the brackets.

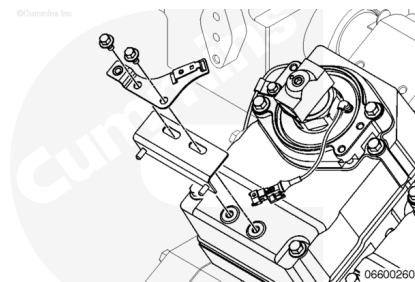


Remove the P-clip securing the exhaust gas temperature sensor wire to the injector cover plate.

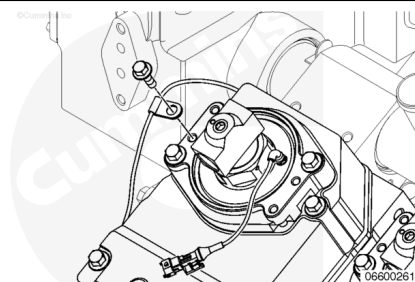


If equipped with a turbocharger speed sensor, remove the four capscrews securing the brackets to the rocker lever cover plate (left bank rear most cylinder).

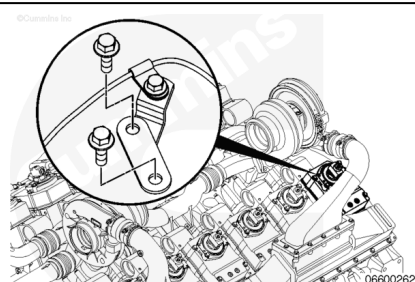


Remove the two capscrews securing the injector cover plate to the rocker lever cover and remove the injector cover plate. Pry injector cover plate evenly on opposite sides using a heel bar.
Remove the o-ring seal from the rocker lever cover plate and discard it.

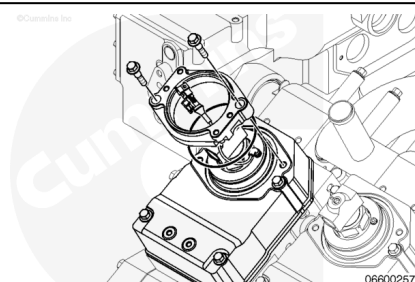

Remove the four capscrews securing the rocker lever cover.
Remove the rocker lever cover and gasket.
Discard the old gasket.

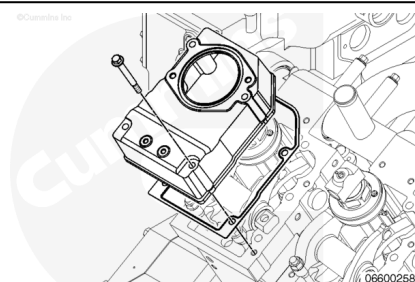

Install the cylinder head protective cover, Part Number 4918282, in the hole located between the push tubes to prevent debris from entering the engine while the rocker lever cover is removed.

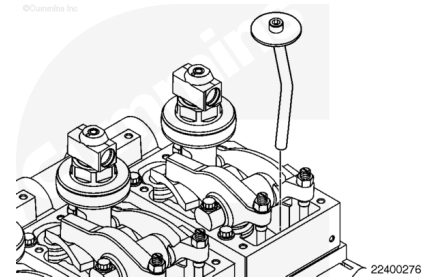

Last Modified: 27-Mar-2019
