

Trainings ▾


Install

Lubricate the o-rings (2) with vegetable oil.

Note : Use of other lubricants, such as engine oil, will cause the o-rings to swell.

Install the o-rings.


Install the water transfer tube (1).

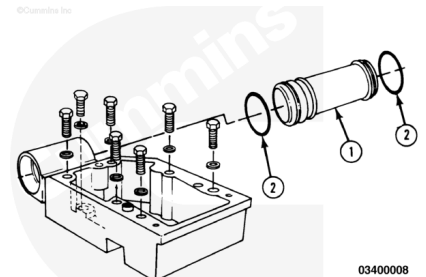

The gasket and housing **must** be aligned correctly with the dowel pins.


Align and install the rocker lever housing gasket and the rocker lever housing.

Install the seven rocker lever housing mounting capscrews.

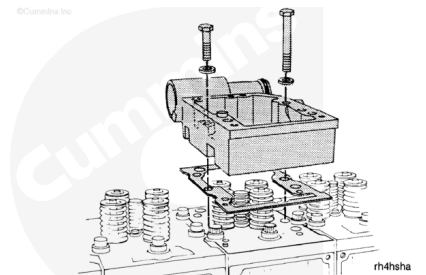

Use the sequence shown to tighten the capscrews.

Torque Value: 115 n·m [85 ft·lb]

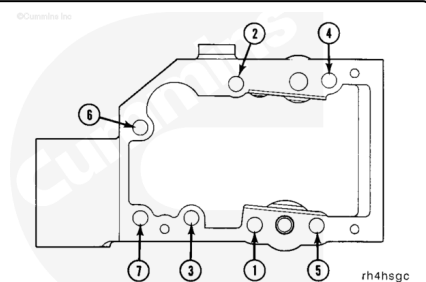

Use water tube driver, Part Number ST-1319, and a hammer. Drive the water tube into the adjacent housing until the water tube is centered.

