



Trainings ▾

Remove

Use Water Tube Driver, ST-1319. Drive the tubes on the right bank toward the rear of the engine. Drive the tube on the left bank toward the front of the engine. Drive the tube until it clears the rocker lever housing.

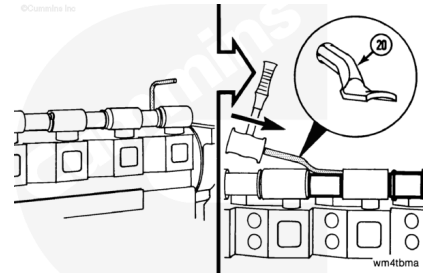

Remove the seven rocker lever housing mounting capscrews and the rocker lever housing.

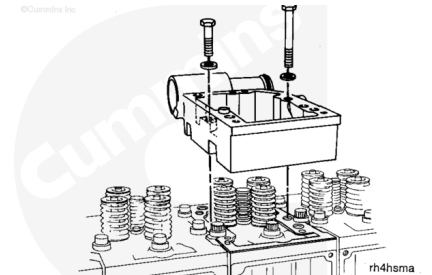

Remove and discard rocker lever housing gasket.

