


Trainings ▾

Install

with Mechanically Actuated Injector

⚠ CAUTION ⚠

Do not touch the machined surfaces of the camshaft follower roller with bare hands. This will cause rust to form; before handling, lubricate the camshaft follower roller with clean engine oil.

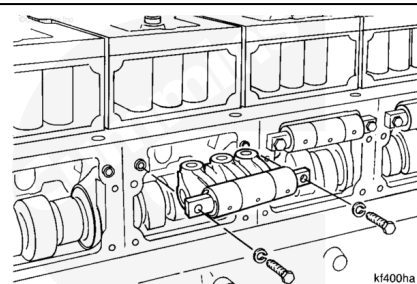

Use clean engine oil to lubricate the camshaft and cam followers.

Install the cam follower assembly. The shaft **must** fit on both ring dowels.


Install and tighten the mounting capscrews.

Torque Value:	Step 1	35 n.m [26 ft-lb]
	Step 2	140 n.m [103 ft-lb]
	Step 3	280 n.m [207 ft-lb]

with Electronically Actuated Injector

Note : Service replacement cam followers are coated with a heavy preservative to prevent rust. This preservative **must** be removed completely with solvent before the parts are installed on the engine. Use clean engine oil to lubricate the cam follower assembly and camshaft.


Lubricate the cam follower assembly.

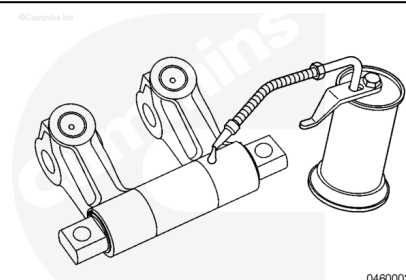

⚠ CAUTION ⚠

Do not touch the machined surfaces of the camshaft follower roller with bare hands. This will cause rust to form; before handling, lubricate the camshaft follower roller with clean

engine oil.

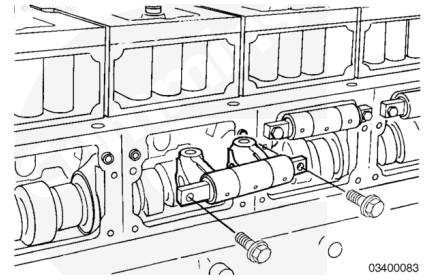

Install the cam follower assembly. The shaft **must** fit on both ring dowels.

Lubricate the threads and install and tighten the mounting capscrews.

Torque Value:	Step 1	35 n.m [26 ft-lb]
	Step 2	140 n.m [103 ft-lb]
	Step 3	280 n.m [207 ft-lb]

Last Modified: 26-Sep-2005
