


Trainings ▾

Remove with Mechanically Actuated Injector

Remove the cam follower cover capscrews and the cam follower cover.

Remove and inspect the cam follower gasket.

Discard the gasket **only** if damaged.

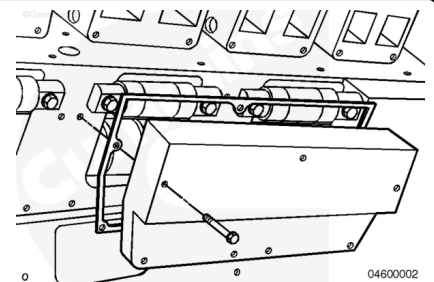


with Electronically Actuated Injector

Remove the capscrews securing the cam follower covers to the engine.

Remove the cam follower cover.

Note the location of the different lengths of the capscrews.

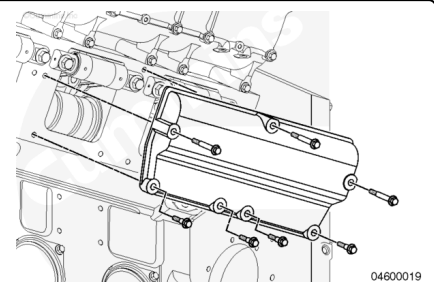

Remove the gasket from the cam follower cover.

Save the gasket for possible reuse.

