

Trainings ▾

Install


with Mechanically Actuated Injector

Install the new thread adapter sealing ring supplied with the new filter.

A fuel-water separator or fuel filter and water separator combination **must** be installed.

Apply a light coating of clean engine oil to the surface of the filter gasket.

Fill the fuel filter with clean fuel.

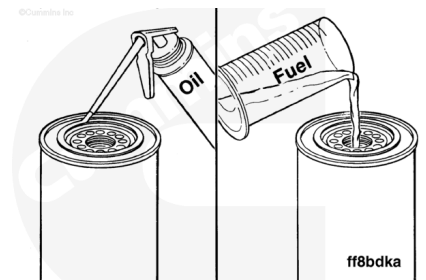

Install the filter on the filter head. Turn the filter until the gasket touches the surface of the filter head.

Tighten the filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after the gasket touches the filter head surface.

