

Trainings ▾

Preparatory Steps

Running Level Dipstick

Note : This step is **only** to be used when installing Running Level Dipstick hardware for the first time.

Park vehicle on level ground. Turn the engine off.

With the engine static for at least 15 minutes, check and note oil level on current dipstick. (The new dipstick arrangement should give an identical reading).


©Cummins Inc.

Remove

Running Level Dipstick

Note : This step is **only** to be used when installing Running Level Dipstick hardware for the first time.

Remove existing oil filler and dipstick hand hole cover, retaining any brackets and capscrews for reuse.

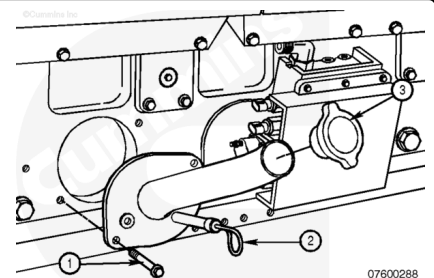

07600288

Install

Running Level Dipstick


Note : This step is **only** to be used when installing Running Level Dipstick hardware for the first time.

Note : For Low NOx emissions capability products, the dipstick hand hole cover is reversed, with dipstick on the left, and filling point on the right. Ensure this is


fitted, to prevent interference between the filling cap and Fuel Tubes.

Fit new hand hole cover using existing capscrews and brackets. Care should be used when inserting the extended dipstick tube into the aperture in the block to reduce the possibility of damaging the tube.

Fit new dipstick in place of the original dipstick.

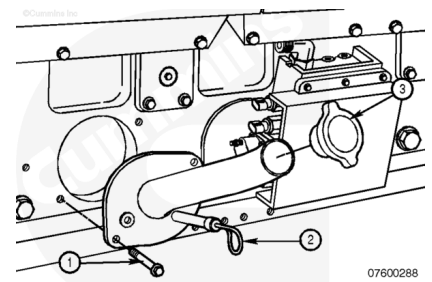

Still with the engine turned off, using the new dipstick, check the static engine oil level. Use markings on the 'Engine Stopped' side of the blade. This should compare to the reading taken with the original dipstick.

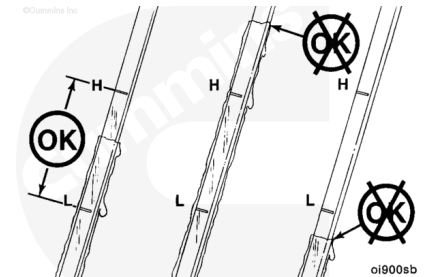


Remove plug from weep hole.

Add or remove oil from the sump to bring the oil level to the oil pan weep hole. Check using dipstick — the weep hole level should coincide with the static high reading on the new dipstick.

Refit plug.

Torque Value: 47 n•m [35 ft-lb]

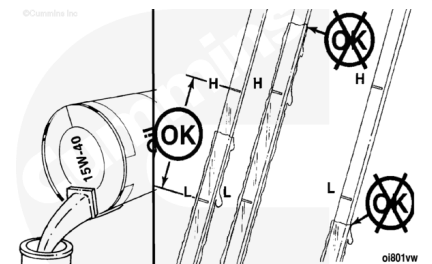

Calibrate


Standard

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

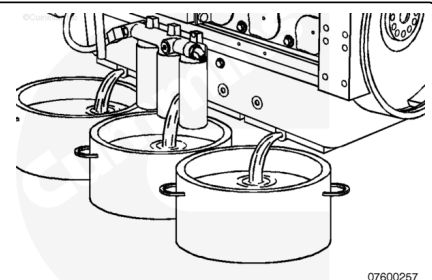

Note : For marine applications only, the lubricating oil dipstick can not be calibrated until the engine is in the vessel and the vessel is in the water.


Drain the lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>) in Section 7.

Allow five minutes for the oil to drain into the oil pan. If the engine and/or oil temperature is below 4°C [39°F], a longer period of time will be required for full drain.

The engine **must** be level to perform this procedure.

Install the dipstick in the dipstick tube housing.

Use the correct volume of clean 15W-40 oil. Fill the oil pan to the specified low or L oil level. Refer to Lubricating Oil System - Specifications. Refer to Procedure 018-017 in Section 18 (</qs3/pubsys2/xml/en/procedures/56/56-018-017.html>) for the correct engine oil capacity for the application.

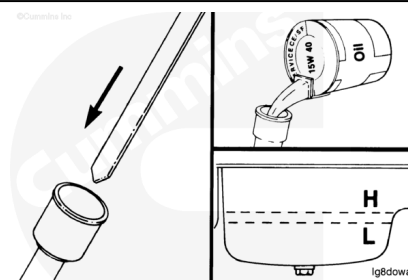


⚠ CAUTION ⚠

Exercise care when marking the dipstick, or the dipstick will break if the scribe mark is too deep.

Remove the dipstick, and scribe a mark across the stick at the oil level. Label the mark with an L to indicate the low oil level.

If a new, blank dipstick is being used, cut the dipstick approximately 38 mm [1.5 in] below the low or L oil level mark.

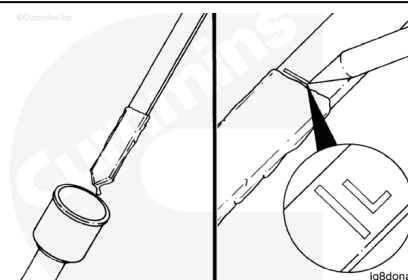


⚠ CAUTION ⚠

Only add the difference between low volume and high volume when adding oil to the specified high or low level. Excessive oil in the crankcase can cause premature engine failure.


Wipe the excess oil from the dipstick, and install it in the dipstick tube housing.

Use the correct volume of oil to fill the oil pan to the specified high or H oil level. Refer to the Lubricating System Specification. Refer to Procedure Procedure 018-017

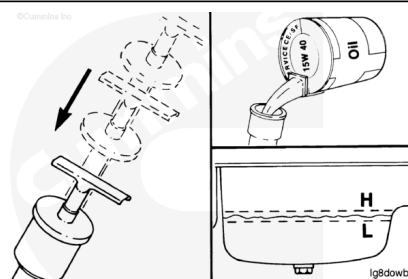

(/qs3/pubsys2/xml/en/procedures/56/56-018-017.html) in Section 18, for engine oil capacity.


Remove the dipstick, and scribe a mark across the stick at the oil level. Label the mark with an H to indicate the high oil level.

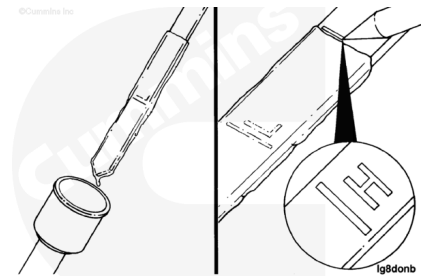


Running Level Dipstick

To calibrate the running level dipstick, the following procedure **must** be followed:

1. With the oil level to the static high mark on the dipstick and confirmed by using the weep hole, operate the engine to bring the pan temperature up to approximately 99°C [210°F].
2. Return the engine to the low idle condition, disengage any engine driven accessories and put the transmission in neutral.
3. Allow to idle for 5 minutes.
4. Remove the oil filler cap.
5. Remove the dipstick from the tube and wipe clean.
6. Insert the dipstick fully and immediately withdraw.
7. Check the oil level marking on the engine idling side of the dipstick.
8. The running level readings **must** be between the high and low level range and produce a clearly readable line. If not, repeat steps 4 and 5. The oil level indicated can be near to the HIGH level mark.

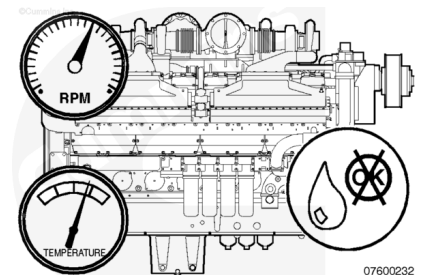

1. Take further readings to confirm that readings are repeatable. However, it is **not** unusual for the level in the sump to vary slightly while the engine is idling. It can however remain near to the HIGH level mark. Total idling time can **not** exceed 10 minutes.
2. Install the oil filler cap.

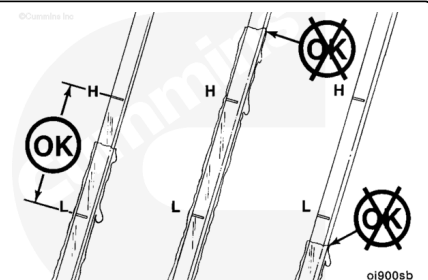

When satisfied that the dipstick registers the high running level correctly, it is suggested that the same test be run with the oil pan drained to the static low level mark.

At all times during the low level test, monitor the low oil pressure and temperature warning lamps and gauges.

Repeat the procedure used for the high level testing. The run level readings **must** be between the run high and low level range indicated on the dipstick. Total idling time **must not** exceed 10 minutes.

When satisfied that the dipstick markings are reflective of the behavior of the oil in the oil pan at low levels, add oil to the oil pan in equal steps until the high level is reached.

Each time an amount of oil is added check that the dipstick registers a change in the oil level. Each quantity of oil added can register a change in the level on the dipstick.

If it is practical and safe while the engine is idling use the engine running dipstick procedure. If it is **not** possible use the static level checking method.

As a guide, 10 mm [0.394 in] on the dipstick equates to approximately 30.3 liters [8 gal] of oil on a QSK60 engine.

When the above tests have been completed and the operator is confident with the results, the vehicle can be returned to normal operations.