



Trainings ▾

Fluorescent Dye Tracer


Add one unit of Fluorescent Tracer, to each 38 liters [10 gal] of engine lubricating oil. Refer to Procedure 018-017 (</qs3/pubsys2/xml/en/procedures/56/56-018-017.html>) in Section V for oil pan capacity.

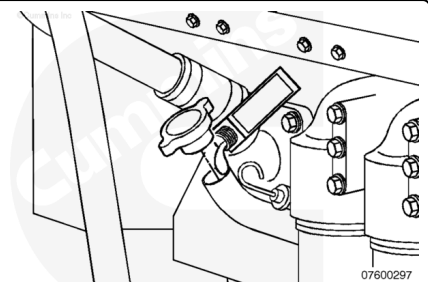

Operate the engine at low idle for 10 minutes.

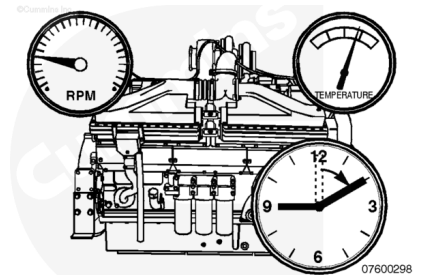


Shut the engine off.

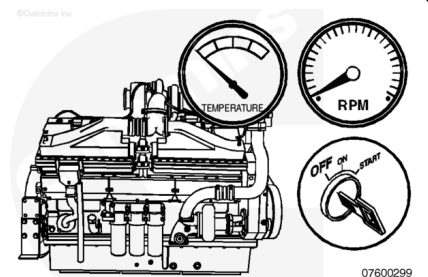


Use a High-Intensity Black Light to inspect for oil leakage.

Oil will glow a dark blue color.

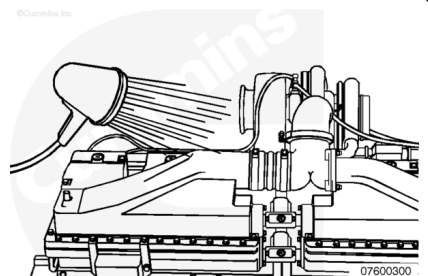


If an oil leak into the coolant is suspected, check the coolant.

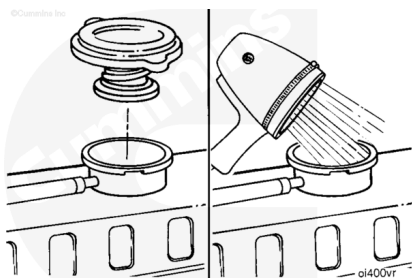

Clean and Inspect for Reuse

⚠ WARNING ⚠


Wear safety glasses or a face shield, as well as protective clothing, to prevent personal injury when using a steam cleaner or high-pressure water.

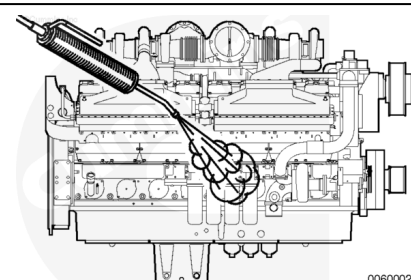


Use a steam cleaner or a high-pressure washer to clean the engine.

Operate the engine until the coolant temperature reaches 80°C [176°F]. Inspect the exterior of the engine for leaking gaskets, seals, o-rings, pipe plugs, or fittings.

Note : Before replacing any gaskets, verify that the capscrews are tightened to the correct torque values. Refer to Procedure 018-009 (</qs3/pubsys2/xml/en/procedures/99/99-018-009.html>) for the capscrew torque listings.

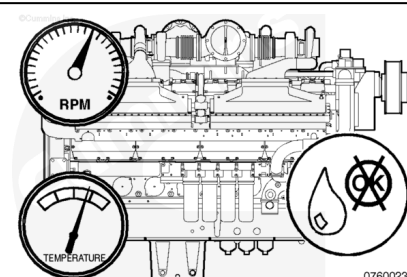


Check for a loose, broken, or missing oil dipstick tube, dipstick, or oil filler cap.

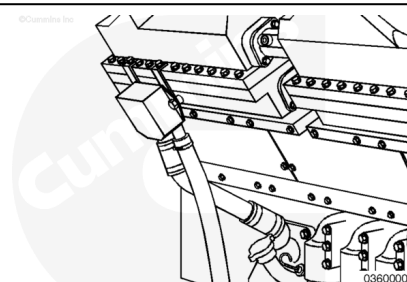

Check the engine crankcase breather elements and breather hose for restriction.

If **not** restricted, check blowby. Refer to Procedure 014-005 (</qs3/pubsys2/xml/en/procedures/56/56-014-005-tr.html>). High blowby can cause gasket and seal leakage.

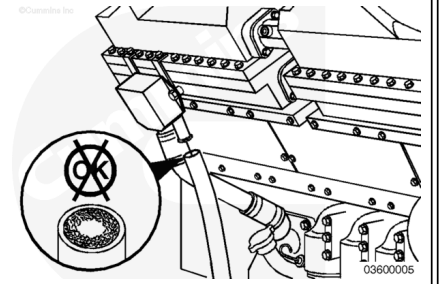

Last Modified: 22-Jul-2005
