


Trainings ▾

Install

⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

Position the cover plates (2) and gaskets (3) on the oil pan adapter (4) with capscrews (1).

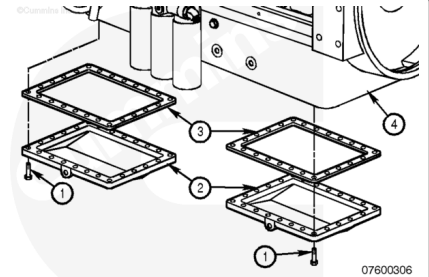

Tighten the capscrews in the sequence as shown.

Torque Value: 45 n•m [33 ft-lb]

Install and tighten the drain plug(s).

Torque Value: 47 n•m [35 ft-lb]

