

Trainings ▾

Install


QSK45 Engines

⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

To ease in assembly, plastic wire ties can be used to retain the gasket until the capscrews can be installed, then cut and remove the ties before tightening the capscrews.


Install the gasket (3) on the oil pan adapter assembly (2).

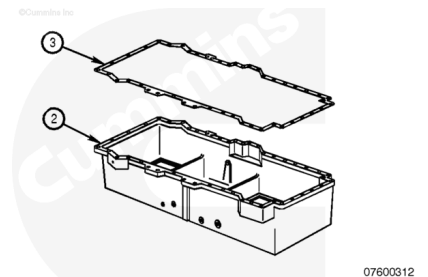

⚠ WARNING ⚠


This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

Position the oil pan adapter assembly (2) with the gasket (3) on the engine (4) with the capscrews (1).

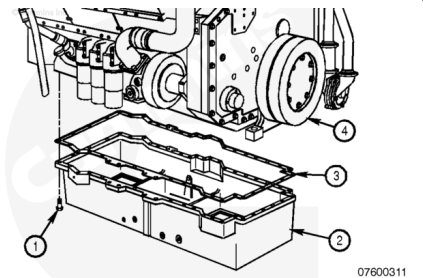

Tighten the capscrews in the sequence shown.

Torque Value: 45 n•m [33 ft-lb]

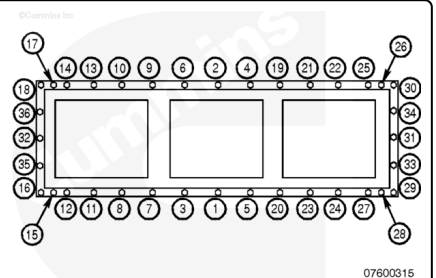


QSK60 Engines

⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

To ease in assembly, plastic wire ties can be used to retain the gasket until the capscrews can be installed, then cut and remove the ties before tightening the capscrews.

Install the gasket (3) on the oil pan adapter assembly (2).

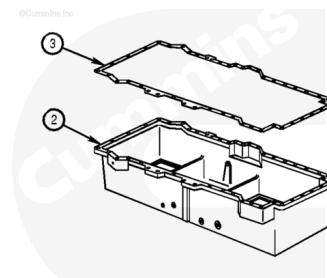


07600312

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.


Position the oil pan adapter assembly (2) with the gasket (3) on the engine (4) with the capscrews (1).

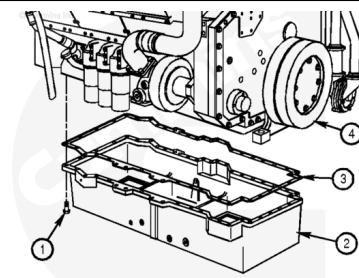

07600311

Tighten the capscrews in the sequence shown.

Torque Value: 45 n•m [33 ft-lb]

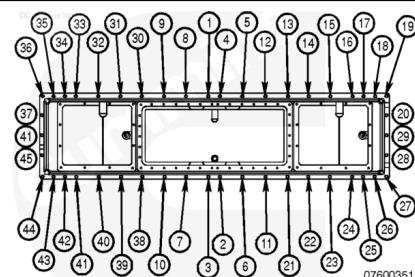

07600351