


Trainings ▾

Remove

⚠ WARNING ⚠

To reduce the possibility of personal injury, wear the appropriate eye and face protection when removing the straight threaded o-ring plug holding in the oil pressure regulator. The spring is under pressure and can cause personal injury.

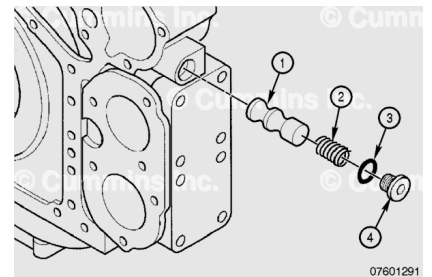

Carefully remove the straight-thread o-ring plug (4).


Remove the spring (2) and spool (1).

Remove the o-ring (3) from the straight thread o-ring plug.

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

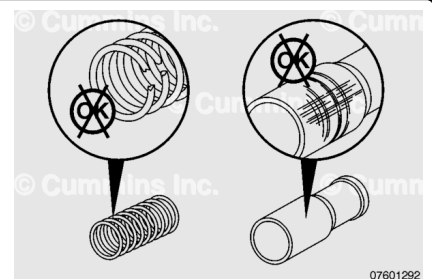

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the lubricating oil pressure regulator spool and spring. Dry with compressed air.


Inspect the spring for broken coils.

Inspect the spool for scuffing. Minor scuffs can be removed with a fine crocus cloth.

The critical area of the spool is the seating area. Polished areas are normal.

Measure the specified free length of the spring. The specified free length of the spring is 150.96 to 154.96 mm [5.94 to 6.10 in]

Use a spring tester. Measure the force of the spring at working height. The spring working height is 114.3 mm [4.50 in].

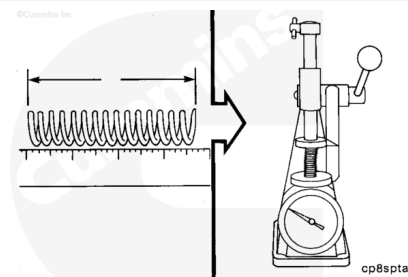

Lubricating Oil Pressure Regulator (Piston Cooling) Spring

n		lbf
106.87	MIN	24.02
118.12	MAX	26.55

If the spring is **not** within specifications, it **must** be replaced.


Install

Lubricate the spool (1) with clean engine oil.

Install the spool (1) and spring (2) into the flywheel housing.

Install the o-ring (3) onto the straight thread o-ring plug (4).

Install the straight thread o-ring plug into the flywheel housing and tighten.

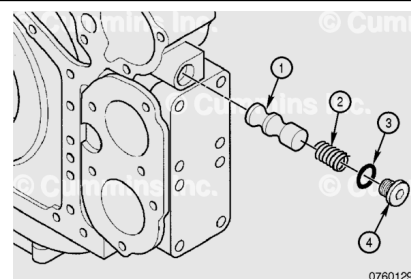

Torque Value: 60 n•m [44 ft-lb]