


Trainings ▾

Remove

Stand-alone

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

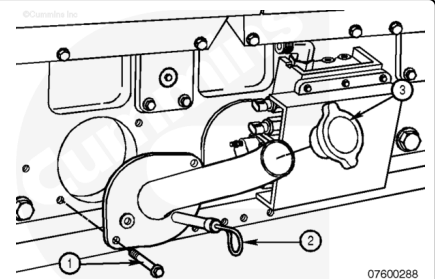

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

For removal instructions, refer to the lubricating oil dipstick Procedure007-011 (</qs3/pubsys2/xml/en/procedures/56/56-007-011-tr.html>).


Integral Crankcase Breather

Loosen the two clamps fixing the sleeve (2).

Slide the sleeve away from the filler tube (1).

Loosen the clamp (3) fixing the filler tube to the hand hole cover.

Remove the filler tube.

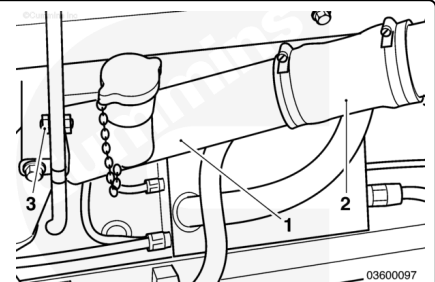

with Electronically Actuated Injector


⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged

contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

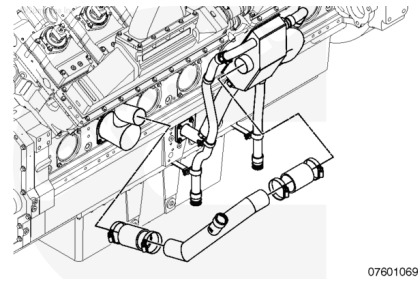


Loosen the clamps securing the hoses to the oil fill tube and remove the tube, hoses and clamps.

Clean and Inspect for Reuse

with Electronically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

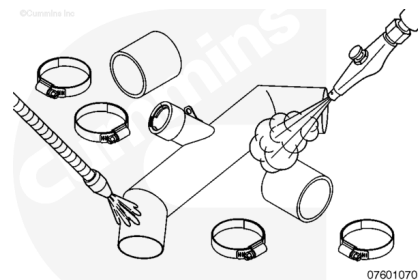


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Clean all the parts with Cummins® parts cleaner, Part Number 3824510 or equivalent.

Dry with compressed air to prevent contamination of the lubrication system with residual cleaning fluid.


Inspect the oil fill tube for damage, cracks, or corrosion. Replace if damaged.

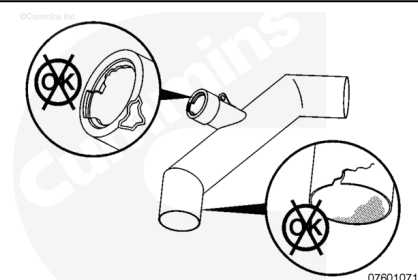

Inspect the hoses for cracks, tears, and damage. Replace if damaged.

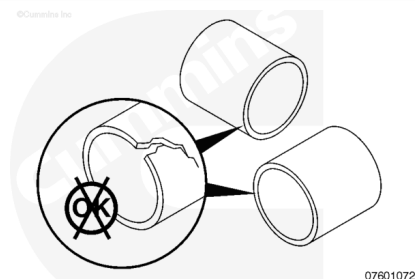


Inspect all the hose clamps for damage, or stripped threads. Replace if damaged.

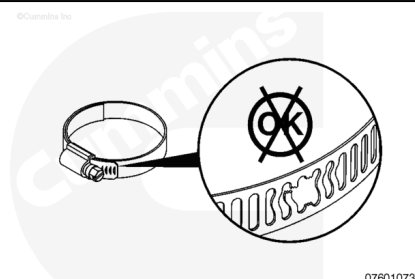

Install

Stand-alone

For installation instructions refer to Procedure 007-011 (</qs3/pubsys2/xml/en/procedures/56/56-007-011-tr.html>), Lubricating Oil Dipstick Tube.

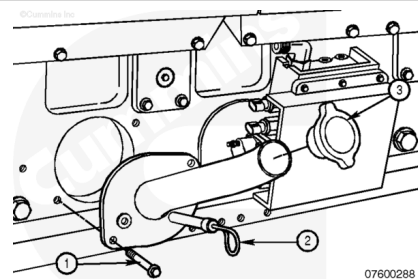


Integral Crankcase Breather

Slide the filler tube over the hand hole cover tube.

Slide the sleeve (2) onto the filler tube (1).


Tighten all hose clamps.

Torque Value: 6 n•m [53 in-lb]

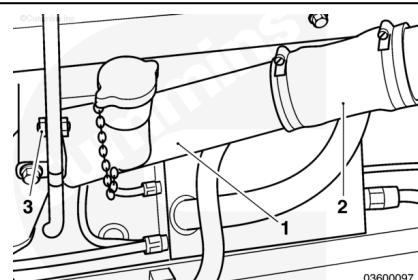

with Electronically Actuated Injector

Install the two hoses and four clamps on the oil fill tube.

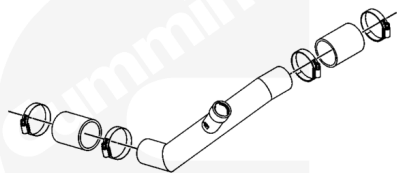


07601074

Install the oil fill tube and tighten the hose clamps.

Hose Clamps	8 n.m	[71 in-lb]
-------------	-------	------------

Operate the engine and check for leaks.

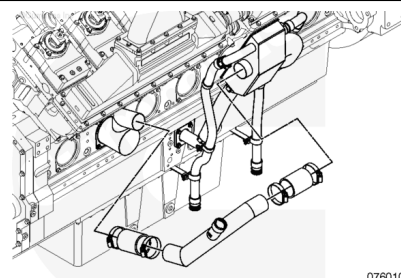

07601069