


Trainings ▾

Exploded View

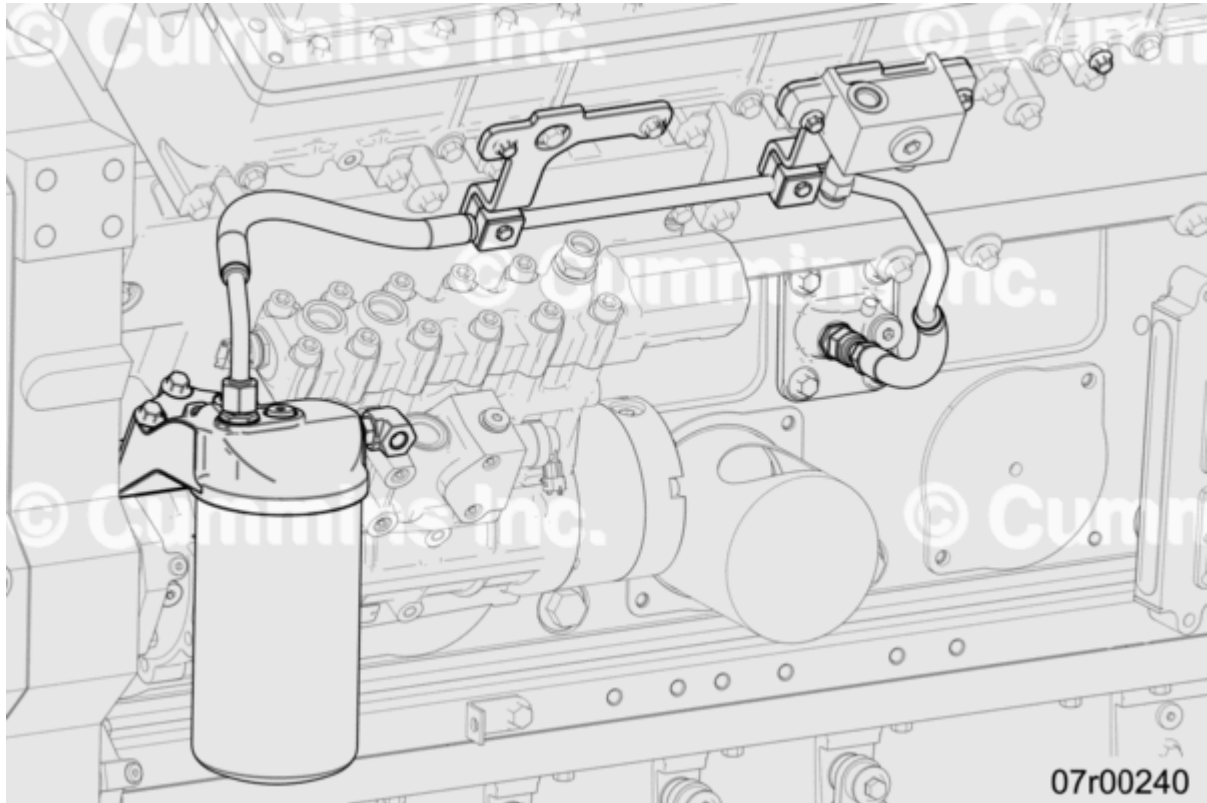

Fuel Pump Drive Lubricating Oil Supply Line (Fitted to Block)

General Information

The fuel pump drive lubricating oil supply line (block supplied) increases the pressure of the oil available to the electronic fuel pump. The line collects oil from the engine's main oil rail and supplies it to the fuel pump drive lubricating oil filter.

All components handled in this procedure weigh less than 23 kg [50 lb].

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect batteries and power supplies. See equipment manufacturer service information.


Remove

Remove both capscrews from the pipe clamps.

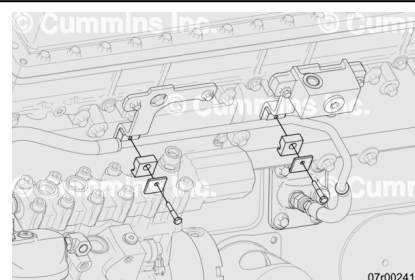


Loosen the connections to the filter head and block.

Remove the supply line.

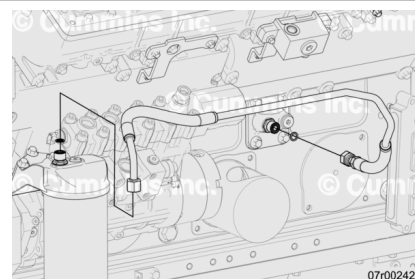


Remove unions from filter head and block. Remove and discard the O-rings from the unions.

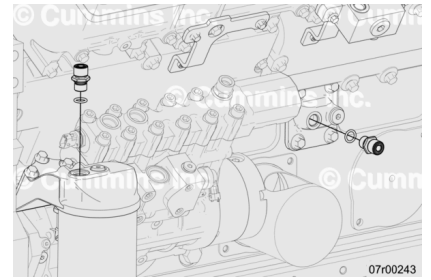

Remove fuel manifold. Refer to Procedure 006-013 in Section 6. (</qs3/pubsys2/xml/en/procedures/56/56-006-013-tr.html>)

Loosen capscrews clamping fuel line support brackets.


Remove oil line supporting brackets.

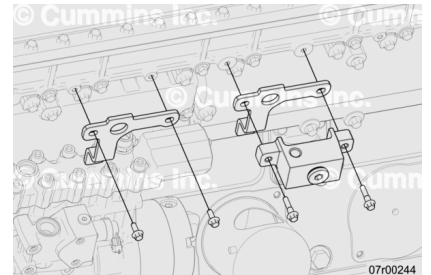

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

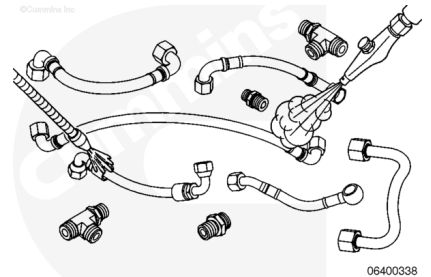

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before use.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Use solvent to clean the Oil supply lines, tee fittings, and unions.

Dry with compressed air.

Inspect the oil supply lines for restrictions that can prevent oil from flowing freely. Replace the oil supply lines if kinks, leakage, or other damage is found.

Inspect the tee unions for damage. Replace if cracked, otherwise damaged, or if stripped threads are found.

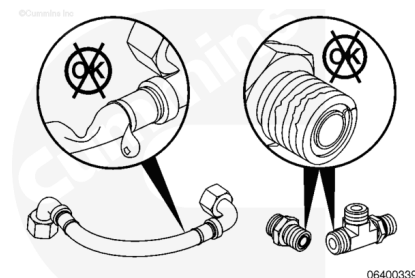


Install

Install new o-rings to unions.

Install unions to filter head and block.

Torque Value: 55 n•m [41 ft-lb]

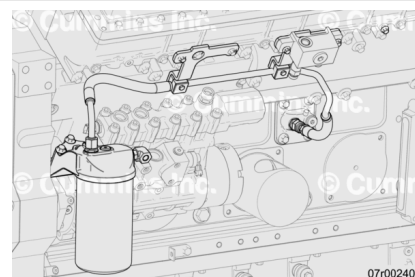


Install two brackets onto aftercooler cover.

Reinstall fuel manifold and fuel line support bracket with existing bolts. Refer to Procedure 006-013 in Section 6.
(/qs3/pubsys2/xml/en/procedures/56/56-006-013-tr.html)


Note : If this is a first install, the right bracket utilizes the existing fuel manifold bolts. Left Bracket uses new bolts (M8 x 1.25-20mm, grade 9.8).

Torque Value: 18 n•m [159 in-lb]

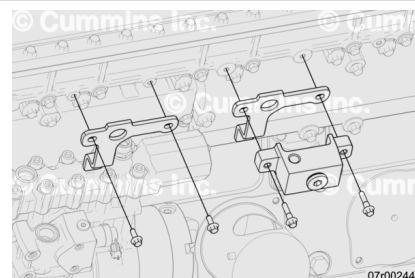


Install lubricating oil transfer hose.

Torque Value: 55 n•m [41 ft-lb]

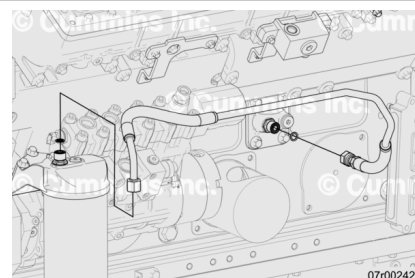

Install two pipe clamps onto brackets to secure lube transfer hose (M6 x 1-35mm, grade 9.8).

Torque Value: 9.5 n•m [84 in-lb]

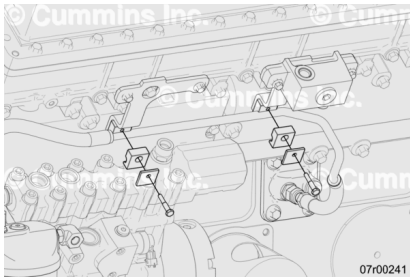

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Confirm lubricating oil level in oil pan is to FULL mark.
- Connect batteries and power supplies. See equipment manufacturer service information.
- Operate engine. Check for leaks.