


Trainings ▾

Remove


WARNING

The fan belt idler is under tension. Do not allow your hands to get between the idler and the belt or the fan hub. Personal injury can result.

For the spring type tensioner, loosen the six capscrews (1) and the three capscrews (2) and the center capscrew (4). Turn the hexagon nut (3) **counterclockwise** to relieve tension on the belt.

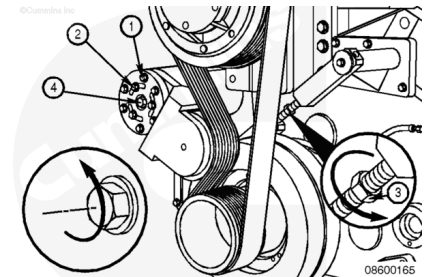


Remove the fan belt.

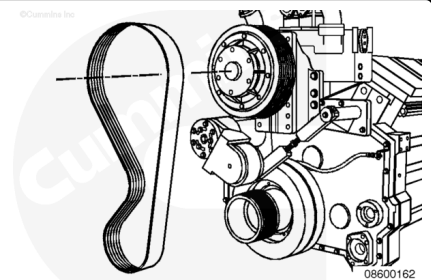


For the slide type tensioner, loosen the four mounting capscrews (1).

Turn the tensioning capscrew to relieve the tension on the belt.

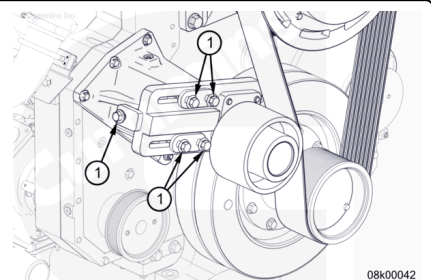

For the automatic type tensioner (when removing the belt **only**):

Use a large wrench to hold the idler cap (1). Rotate the idler cap **clockwise** to relieve the tension on the idler (2).

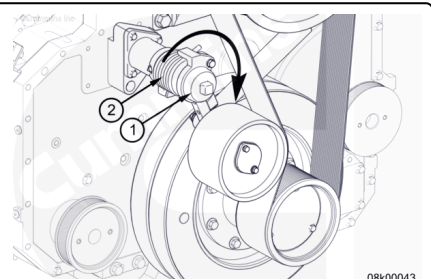

Last Modified: 24-Mar-2017
