


Trainings ▾

Install

Clean the area around the coolant filter head. Clean the gasket surface of the coolant filter head.

The o-ring can stick on the coolant filter head. Make sure the o-ring is removed.

Discard the coolant filters.

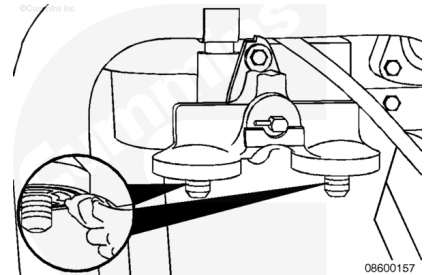

⚠ CAUTION ⚠

When lubricating the seal on the coolant filter do not allow oil to get into the coolant filter. It will adversely affect the SCA.

Lubricate the seal on the coolant filter with clean engine oil.



Install the coolant filter.

Turn the coolant filter **clockwise** until the seal touches the coolant filter head.

Turn the coolant filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after contact.

Turn the valve (1) on the coolant filter head to the ON position.

