


Trainings ▾

Remove

⚠ WARNING ⚠


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

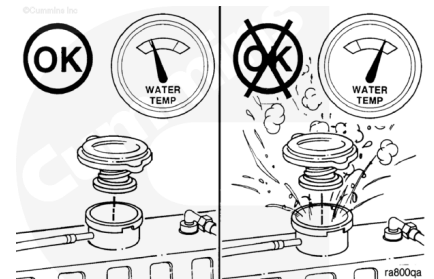

Remove the pressure cap from the radiator.

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

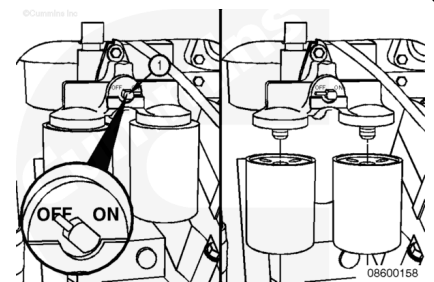

Turn valve (1) on the coolant filter head to the OFF position to prevent water loss.

Remove the coolant filters.