

Trainings ▾


Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

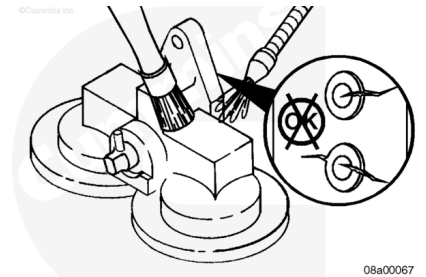

Clean the coolant filter head and components with solvent and dry with compressed air.

Inspect the coolant filter head for cracks and other damages.

Replace the coolant filter head if cracked or damaged.


Inspect the coolant shutoff valve shaft for pitting or corrosion.

Replace the coolant shutoff valve if pitted or corroded.

Assemble

If the coolant filter head inserts were removed, apply a light coat of Loctite™ 270, or equivalent, to a portion of the insert that threads into the coolant filter head.

Install the inserts into the filter head to the protrusion height (5).

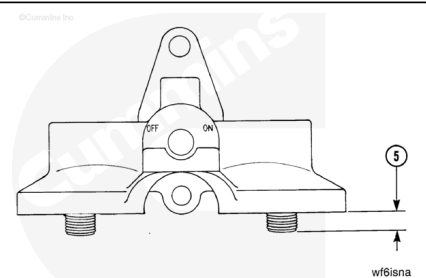

Coolant Filter Head Insert Protrusion Height

mm		in
12.19	MIN	0.48
13.21	MAX	0.52


Install the pipe plug and tighten.

Torque Value: 20 n•m [177 in-lb]

Install the new o-ring seal (3) on the coolant filter shutoff valve shaft (2).

Lubricate the o-ring seal with vegetable oil.


Install the shutoff valve into the coolant filter head.

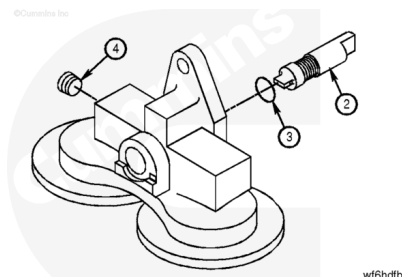

⚠ CAUTION ⚠

The roll pin must be tight in the coolant shutoff valve. Engine damage can occur if the pin falls out.

Use a hammer and a brass drift to install the roll pin into the coolant shutoff valve shaft.

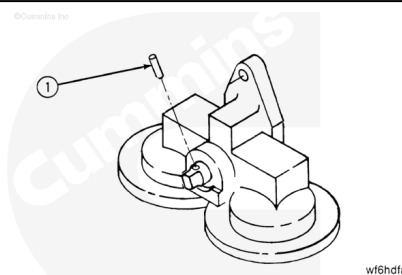

Install

Install the coolant filter head on the thermostat housing with two capscrews.

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

