


Trainings ▾


Remove

Remove the two coolant filter head mounting capscrews, and the coolant filter head (4).

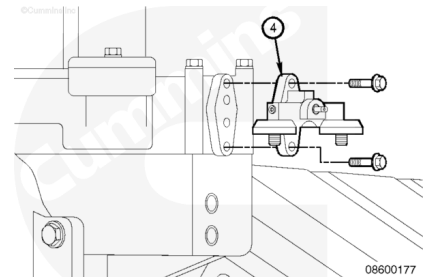

Disassemble


Remove and discard the coolant shutoff valve roll pin (1).

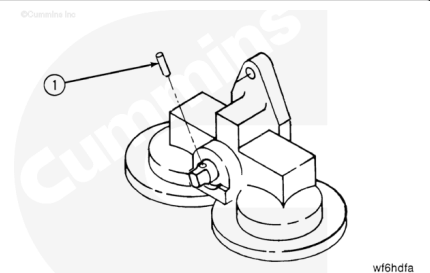

Remove the coolant shutoff valve shaft (2) from the housing.


Remove and discard the coolant shutoff valve shaft o-ring (3) from the coolant shutoff valve.

Remove the pipe plug (4) from the housing.

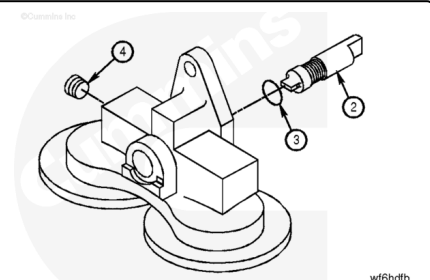

Inspect the inserts for damage. Make sure the inserts are tight.


If the inserts are damaged or loose, remove the inserts.

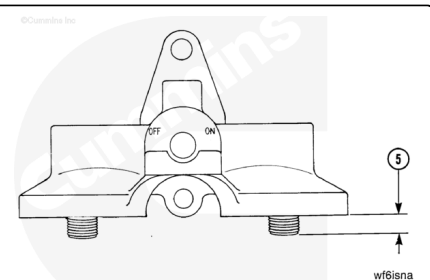

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

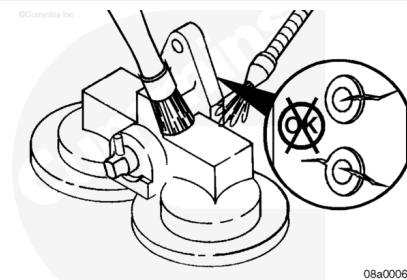

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the coolant filter head and components with solvent and dry with compressed air.

Inspect the coolant filter head for cracks and other damages.

Replace the coolant filter head if cracked or damaged.

Inspect the coolant shutoff valve shaft for pitting or corrosion.

Replace the coolant shutoff valve if pitted or corroded.