

Trainings ▾


Remove

Aftercooled Engines

Remove the upper radiator hoses from the thermostat housing.


Remove the turbocharger coolant return line (1) from the rear of the thermostat housing.

Remove the bypass tube (2) and gasket (3) from thermostat housing.

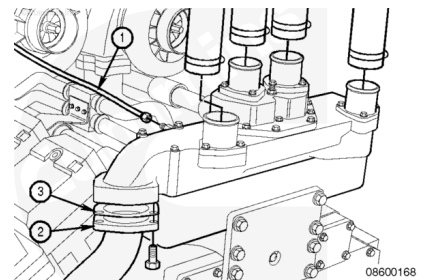


Remove the four capscrews (4) and the two retainer clips (5).

Remove the aftercooler coolant return tube (6), aftercooler coolant supply tube (7), o-rings (8), and hoses (9) from the thermostat housing support.

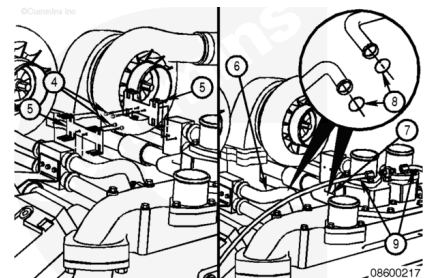


Remove the two water transfer tubes. Remove and discard the o-rings.

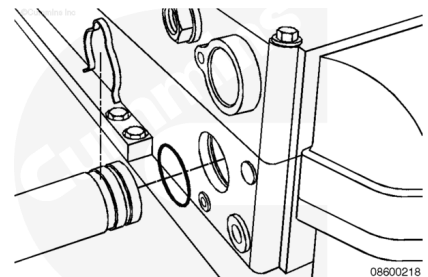

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

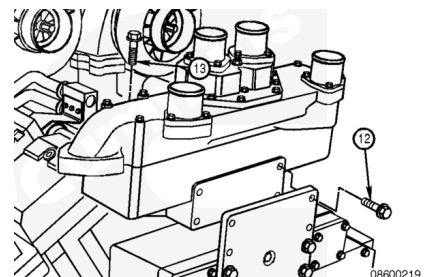


If the engine is equipped with an air compressor, disconnect the air compressor water outlet tube from the thermostat housing support.

Remove the four front mounting capscrews (12), the 10 top mounting capscrews (13), and the thermostat housing support.

LTA

Remove the vent hoses from the thermostat housing.

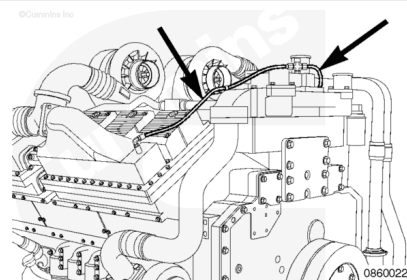


Remove the upper radiator hoses from the thermostat housing.

Remove the upper low temperature aftercooling radiator hoses from the thermostat housing.

Remove the turbocharger return lines (1) from the thermostat housing.


Remove the three capscrews, gasket (3), and bypass tube (2) from the thermostat housing.

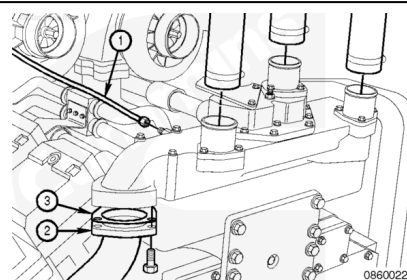

Right Bank


- Remove the capscrews (2)
- Remove the P-clips (1).

The mounting hardware attaches the upper and lower tubes to the brackets on number 5 rocker housing.

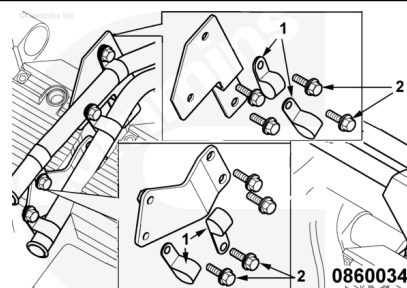

Remove the following:

- Capscrew (1)
- P-clips (2)
- Spacer (3)
- Washer (4)
- Nut (5).

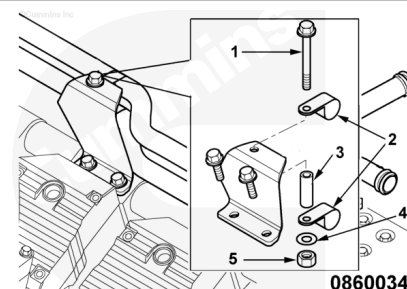


The above listed mounting hardware attaches the upper and lower water tubes to the support bracket mounted on rocker housing number 2.


Remove the following:

- Capscrew (1)
- P-clip (2)
- Washer (3)
- Nut (4).

The above listed mounting hardware attaches the lower water tube to the bracket mounted on the thermostat housing support.

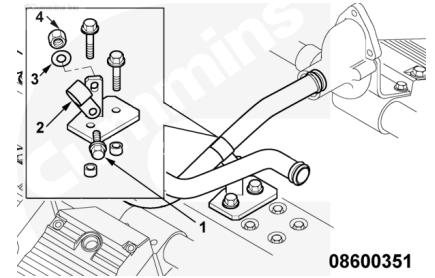


Remove the lower and upper water transfer tube from the rubber tee.

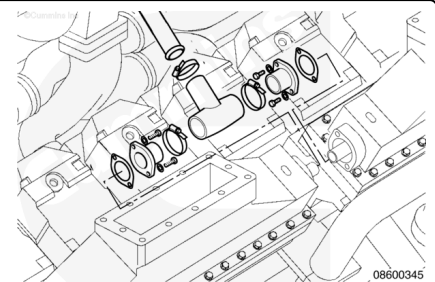

Note : The circled area of the graphic is for location purposes only.


Remove the upper water transfer tube from the thermostat housing.

Remove and discard the o-rings.

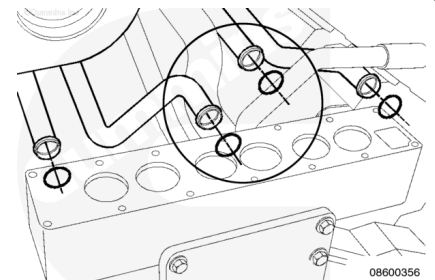

Remove the lower tube from the junction block.


Remove and discard the o-rings.

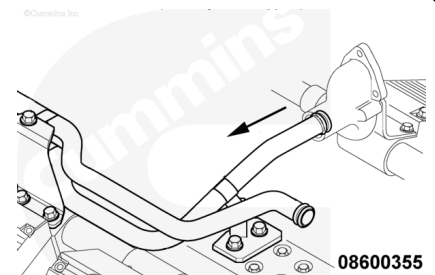

Left Bank


- Remove the capscrews (2)
- Remove the P-clips (1).

The mounting hardware attaches the upper and lower water transfer tubes to the brackets on rocker housing number 5.

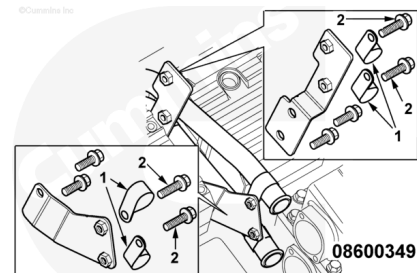

- Remove the capscrews (2)
- Remove the P-clips (1).


The mounting hardware attaches the upper and lower water transfer tubes to the bracket mounted on rocker housing number 2.

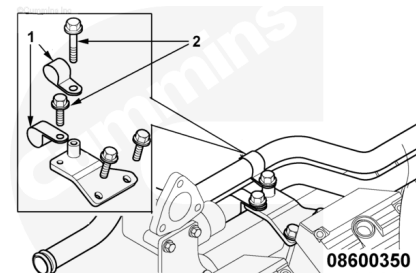


Note : The circled area of the graphic is for location purposes only.

Remove the upper water transfer tube from the thermostat housing.


Remove and discard the o-ring.

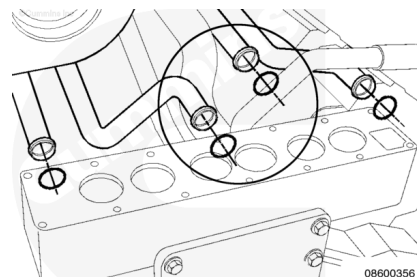


Remove the upper and lower water tubes from the rubber tee.

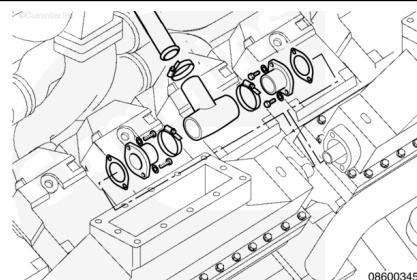

Remove the lower tube from the junction block.

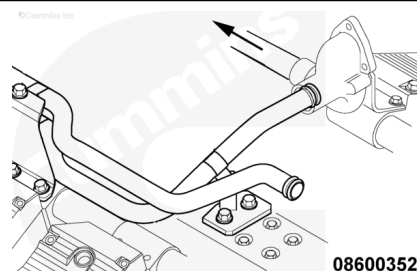


Remove the six capscrews, two gaskets, and two tubes from the thermostat housing to the low temperature aftercooling water pump.

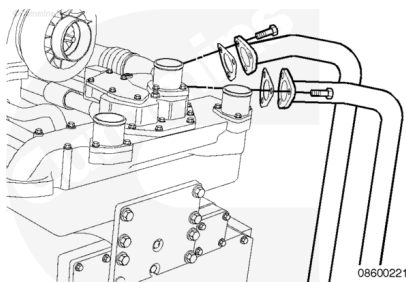


Remove the four capscrews (4) and the two retainer clips (5).

Remove the aftercooler coolant return tube (6), aftercooler coolant supply tube (7), o-rings (8), and hoses (9) from the thermostat housing support.

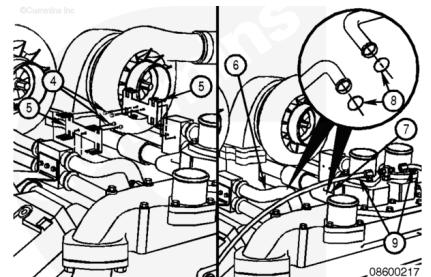


Remove the two water transfer tubes.

Remove and discard the four o-rings.

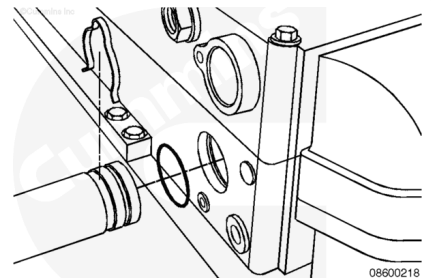

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

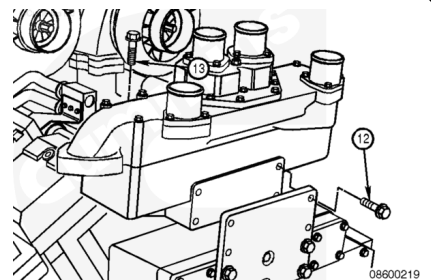

If the engine is equipped with an air compressor, disconnect the air compressor water outlet tube from the thermostat housing support.

Remove the four front mounting capscrews (12), the 10 top mounting capscrews (13), and the thermostat housing support.

