

Trainings ▾


Fill

Make sure the radiator draincocks are closed.

Open the cooling system venting petcocks.


Use fully formulated coolant to fill the cooling system.

Use the correct units of SCA to obtain the correct cooling system protection. Refer to Procedure 018-018 in Section V. (</qs3/pubsys2/xml/en/procedures/56/56-018-018.html>)

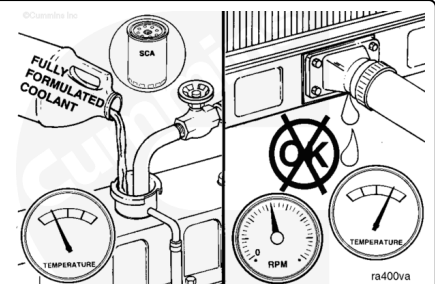

⚠ CAUTION ⚠

Fill the cooling system slowly to avoid trapping air in the cooling system. Air trapped in the system can cause water pump cavitation and inadequate coolant level.

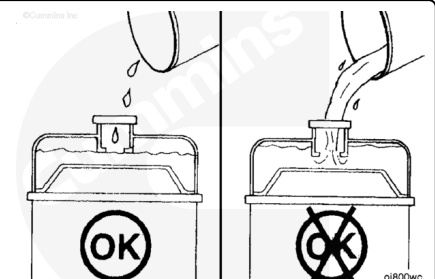

Begin filling the cooling system with coolant.


Fill until a continuous stream of coolant begins to flow from each opened petcock in the coolant system.

Close each petcock as the continuous stream of coolant begins to flow from that petcock.

Fill the system with the coolant to the bottom of the radiator fill neck.


Install the cooling system pressure cap.

Operate the engine until the coolant reaches a temperature of 85°C [185°F]. Check for leaks.

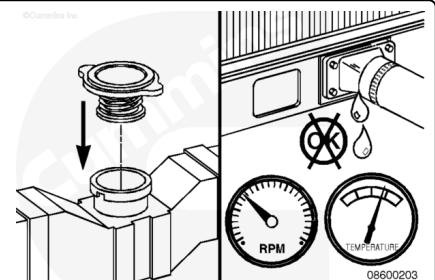

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

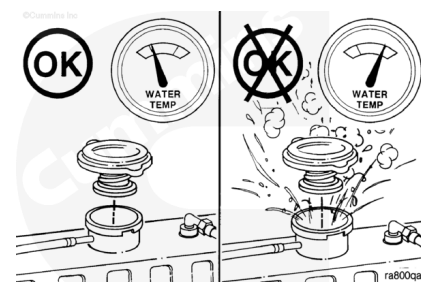

Shut the engine off, and allow it to cool.

Check the coolant level.