


Trainings ▾

Install

On engines fitted with the slide arm adjuster, install the idler assembly and bracket on engine.


Install the four capscrews and two clamping plates.

Torque Value: 280 n·m [207 ft-lb]

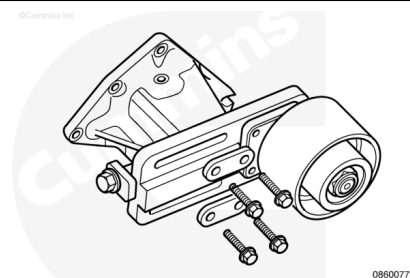

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift component or assembly.

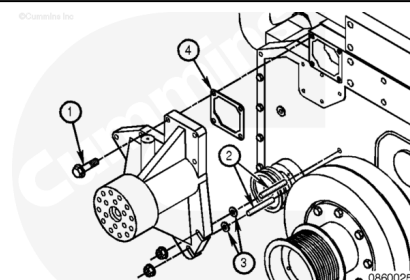

On engines fitted with the control arm adjuster, use the correct lifting equipment to install the idler pulley support bracket.

Make sure the rubber gasket (4) remains in the correct position during installation.

Install the studs (2) and spacers (3).

Install the idler support bracket and gasket (4).

Install the 12 mm capscrews (1) into the idler pulley support bracket and tighten.

Torque Value: 115 n·m [85 ft-lb]

Install the locknuts onto the studs (2) and tighten.


Torque Value: 80 n·m [59 ft-lb]

For engines that have a Rockford™ fan clutch, a solenoid bracket (2) is installed with the actuator bracket (1). The same mounting capscrews are used.

Install the actuator bracket capscrews, actuator bracket (1) and solenoid bracket (2) on the front gear cover.

Tighten the capscrews.

Torque Value: 115 n•m [85 ft-lb]

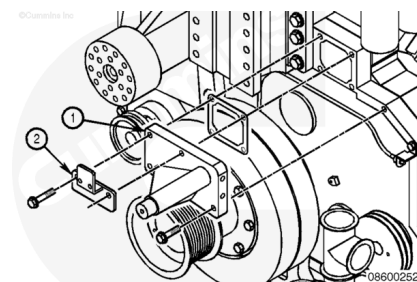

Position the idler arm assembly (2) with washer plate (10) and capscrews (9).

Install the six capscrews (8).


Tighten the capscrews.

Torque Value: 200 n•m [148 ft-lb]

Install the idler arm assembly (7), washer (6), retainer plug (5), and capscrews (4).

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

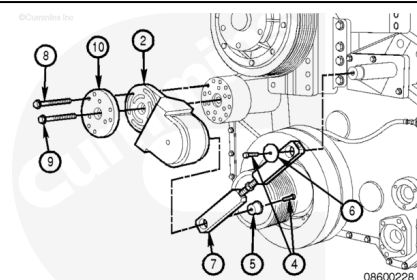

Install the three capscrews (3) in the idler arm assembly (2).

Torque Value: 200 n•m [148 ft-lb]

