


## Trainings ▾

### Remove

#### Standard

#### **⚠ WARNING ⚠**

**This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.**

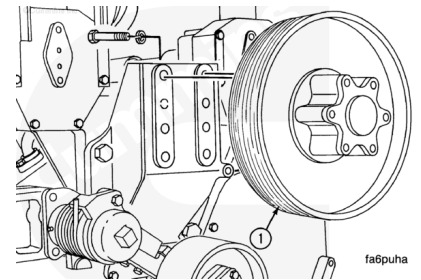


Remove the eight capscrews and the fan hub (1).

#### Rockford

Remove the wire tie that secures the number 12 drain hose (1) to the number 8 supply hose.

Disconnect the drain hose from the port in the side of the fan clutch.


Disconnect the drain hose from the large tee in the front gear housing and remove the hose.

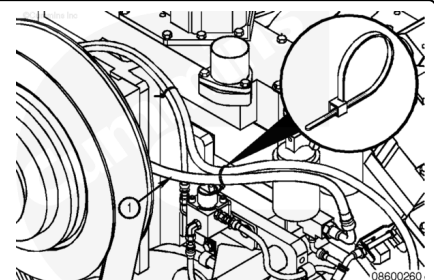

Remove the wire tie that secures the number 4 solenoid-to-clutch supply hose (1) to the number 8 fan hub supply hose.

Disconnect the solenoid-to-clutch supply hose from the top of the fan clutch.


Disconnect the solenoid-to-clutch supply hose from the solenoid and remove the hose.

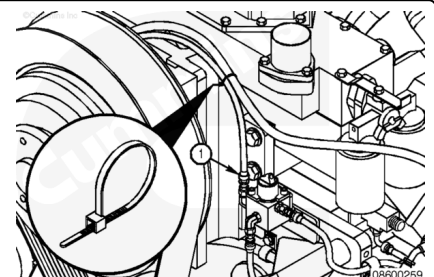

Remove the capscrew and p-clip located on the side of the actuator.

Disconnect the solenoid drain hose from the sump port (1) of the solenoid (2).


Disconnect the solenoid drain hose from the lower port of the large tee (3) and remove the hose.

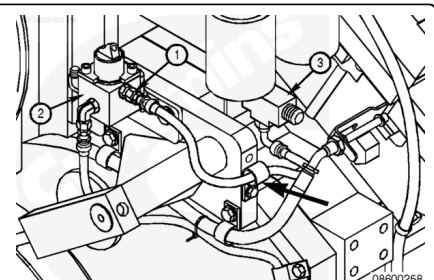

Remove the wire tie that secures the number 8 fan hub supply hose.


Disconnect the fan clutch supply hose from the rear side of the lower tee.

Disconnect the fan clutch supply hose from the top of the fan clutch and remove the hose.

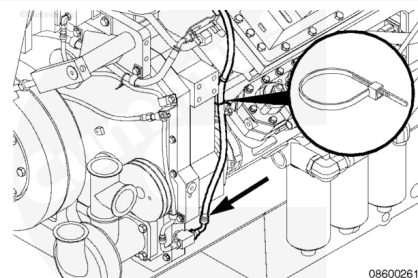


Remove the wire tie that secures the solenoid supply to the fuel hose.

Remove the three capscrews and p-clips that secure the solenoid supply hose to the front of the engine.

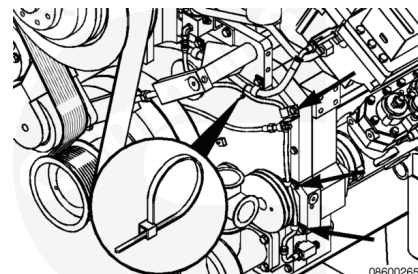


Disconnect the solenoid supply hose from the supply port of the solenoid valve.


Disconnect the solenoid supply hose from the lower tee and remove the hose.

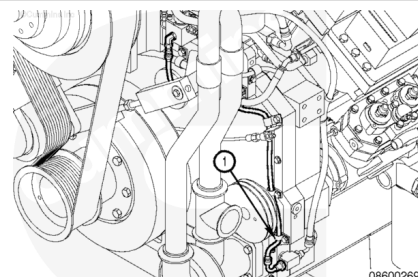

Remove the tee located in the lower left bank port in the front gear cover.

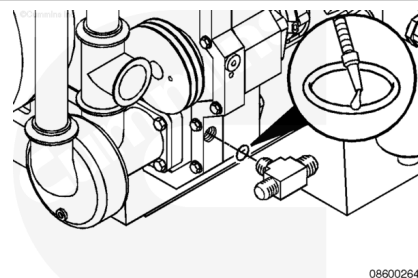


Remove the tee located in the top left bank of the front gear cover.

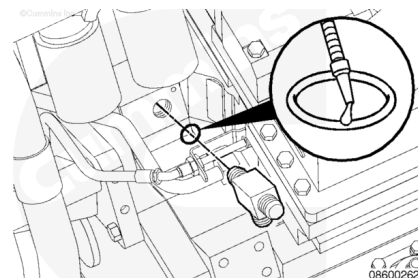


Remove the following:

- Sump port male union (1)
- Supply port 90 degree elbow (2)
- Control port 90 degree elbow (3)
- Solenoid.

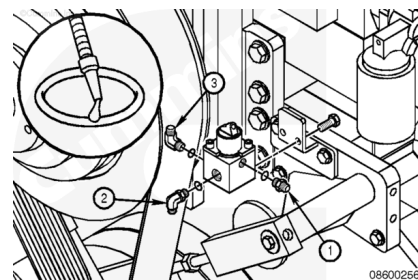

**⚠ WARNING ⚠**

**This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.**

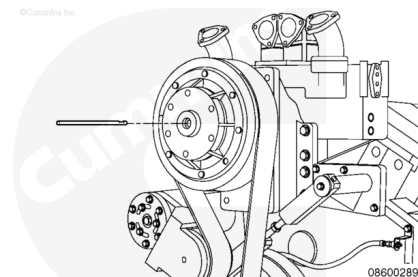

For fan clutches equipped with speed sensors, remove the speed sensor from the center of the fan clutch hub.

Remove the capscrews and the fan hub.