


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

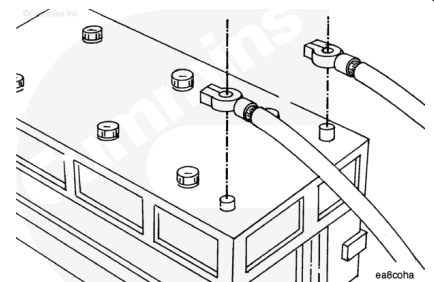


Disconnect the batteries or air supply line to the air starter to prevent accidental starting.

Remove


⚠ CAUTION ⚠

Do not pry or pull on the cooling fan. The cooling fan blades can be damaged.

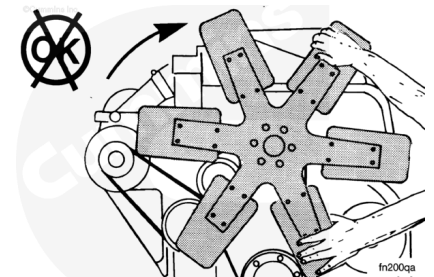

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

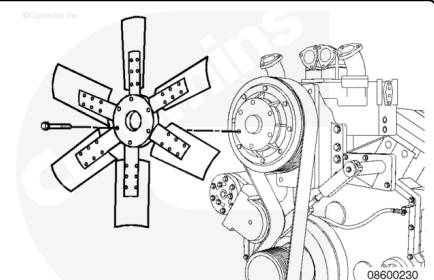


Remove the cooling fan capscrews.

Remove the cooling fan and cooling fan spacer.


Inspect for Reuse

Check the cooling fan for cracks, loose rivets, and bent or loose blades.

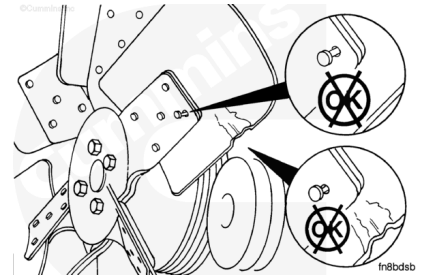

⚠ WARNING ⚠


Do not straighten a bent cooling fan blade or continue to use a damaged cooling fan. A bent or damaged cooling fan blade can fail during operation and cause personal injury or property damage.

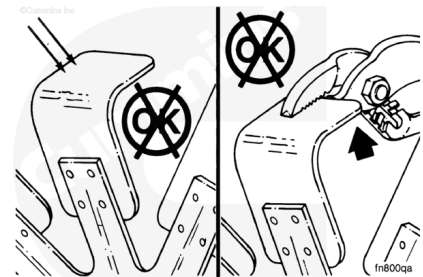

If damage is found, replace the cooling fan.


Install

Replace the original equipment cooling fan with a cooling fan of the identical part number. Cummins Inc. must approve any cooling fan changes.

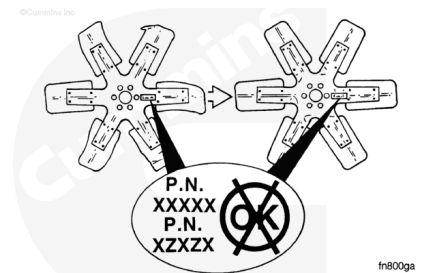

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

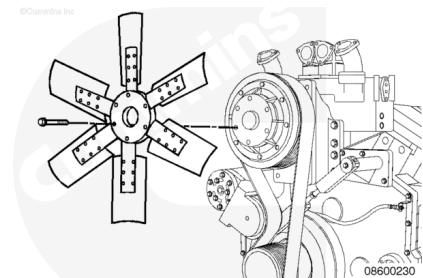


Install the cooling fan, applicable spacer, and capscrews.

Tighten the cooling fan capscrews. Refer to the OEM service manual for correct capscrew torque.

Rotation Check


Use an optical tachometer, Part Number 3377462, or a strobe light to measure the cooling fan rpm.

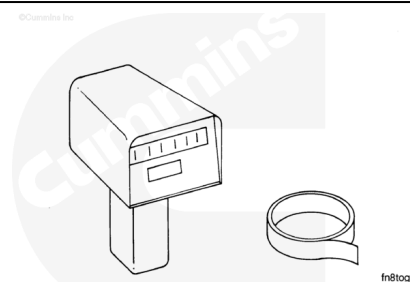


When using Cummins optical tachometer, use a piece of reflective tape, Part Number 3377464, for marking purposes.

Mark a spot on the cooling fan so the fan rpm can be measured.

Mark a spot on the vibration damper or accessory drive pulley to measure engine rpm.

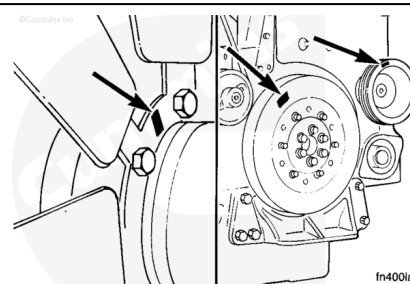

Measure the diameter of the cooling fan belt pulley to determine the drive ratio.

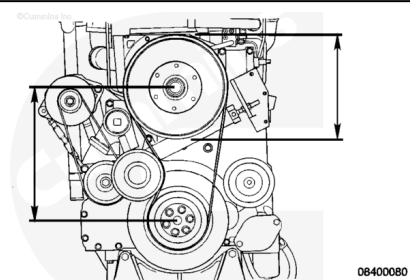


Fan Pulley Diameter	Ratio
513 mm [20.20 in]	0.42
450 mm [17.72 in]	0.42
431 mm [16.57 in]	0.50

Operate the engine.

Compare the cooling fan rpm to the engine rpm.


Compare the cooling fan rpm to the specification.

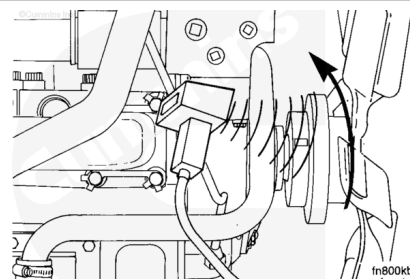

If the cooling fan rpm is **not** correct, check the belt tension.

Refer to Procedure 008-002

(</qs3/pubsys2/xml/en/procedures/56/56-008-002.html>).

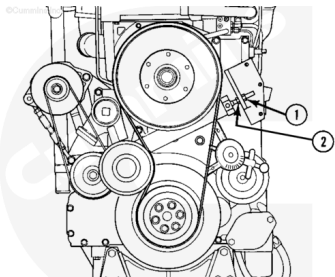


08400002

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

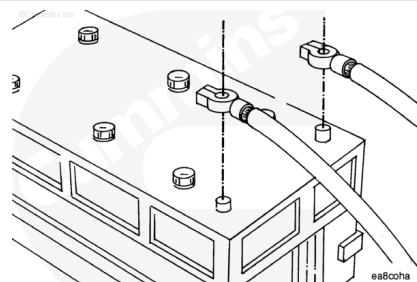

Connect the batteries or air starter supply line.