


Trainings ▾

Leak Test

Aftercooled Engines

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

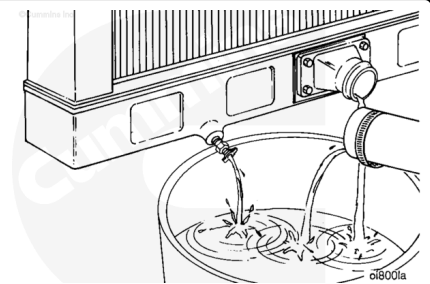

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html>).

Plug the radiator fill line outlet.

Fill the top tank within 25 mm [1 in] from the top with water.

If the level drops and leakage is observed from the draincock and the lower radiator outlet, the baffle is leaking. The radiator **must** be repaired or replaced.

