


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.

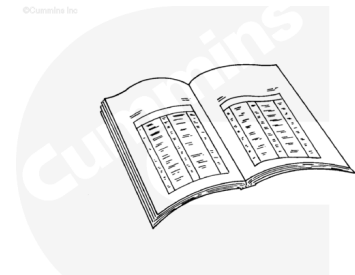

ck800wa

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50° [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose in accordance with local environmental regulations.

- Disconnect the batteries or air supply to the air starter to prevent accidental starting.
- Drain the cooling system. Refer to Procedure 008-018 (Cooling System) in Section 8.
(</qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html>)

Remove


Disconnect the connector harness for the coolant level switch.

Note : On engines with electronically actuated injectors the coolant level switch is located on the opposite side of the heat exchanger.

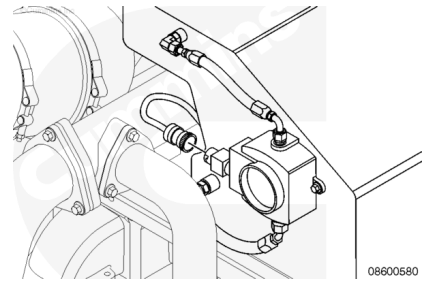


Disconnect the jacket water make up line (1) from the expansion tank.

Disconnect the LTA coolant make up line (2) from the expansion tank.

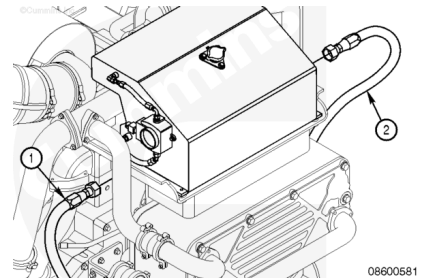


Disconnect all of the vent lines from the expansion tank.

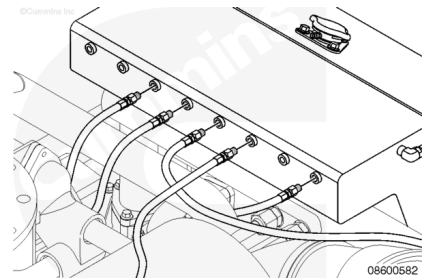

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

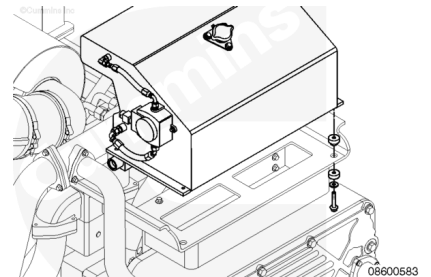

The expansion tank is mounted onto a support bracket which is mounted onto the engine. The support bracket has two capscrews on each side which attach from underneath the tank.


Remove the four capscrews from the expansion tank support bracket.

Remove the expansion tank from the support bracket.

Remove the rubber vibration isolators.

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

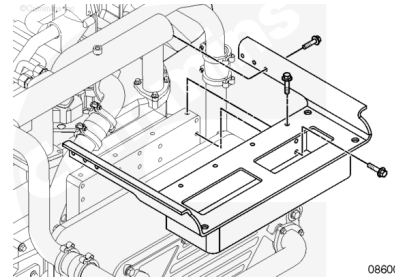


Remove the 10 support bracket capscrews.

Remove the support bracket.


Clean and Inspect for Reuse

Clean the expansion tank by flushing it with warm water.

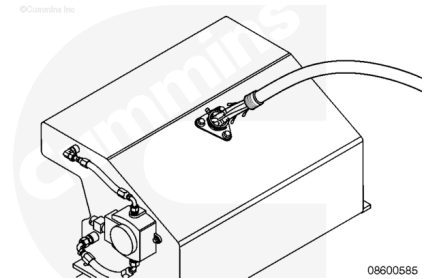


Inspect the expansion tank for cracks or dents.

If the expansion tank is damaged it **must** be replaced.

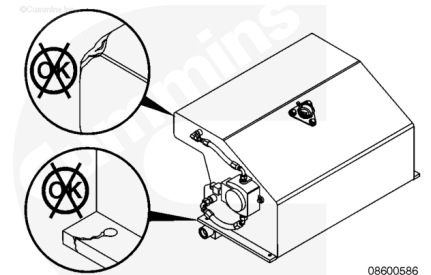

Inspect the rubber vibration isolators for cracks in the rubber.


If the rubber vibration isolators are cracked they **must** be replaced.

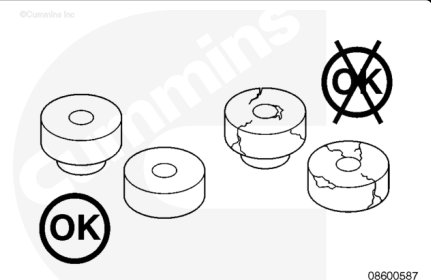

Install

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

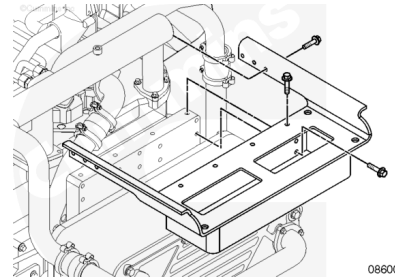


Place the support bracket on the engine and install the capscrews.

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]


A vibration isolator consists of two pieces.

Insert the T-piece into the support bracket hole for all four isolators.

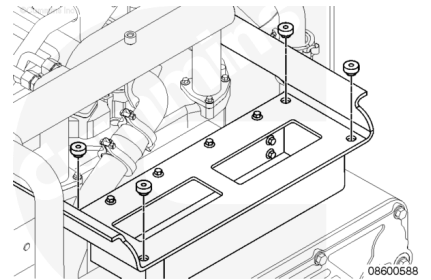

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

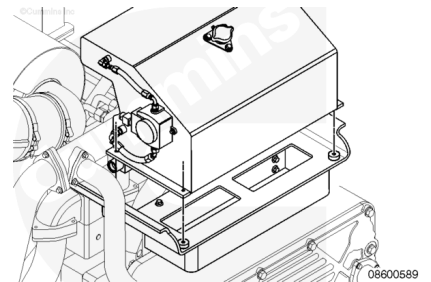

Place the expansion tank on top of the vibration isolators.


Align the expansion tank mounting holes with the vibration isolators.

Place the second half of the vibration isolators onto the capscrews.


Thread each of the four capscrews in finger tight.

Tighten the capscrews.

Torque Value: 40 n•m [30 ft-lb]

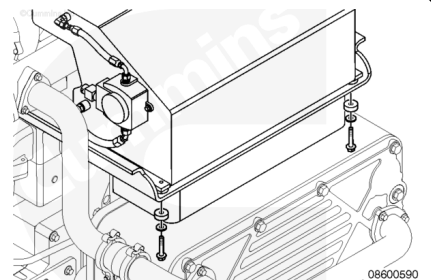

Connect all of the vent lines.

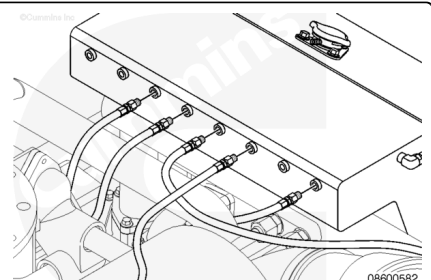


Connect the jacket water make up line (1) to the expansion tank.


Connect the LTA coolant make up line (2) to the expansion tank.

Tighten the fittings.

Torque Value: 74 n•m [55 ft-lb]

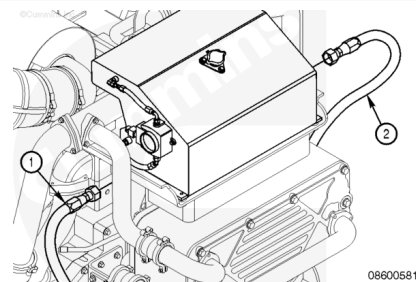


Connect the coolant level switch to the harness.

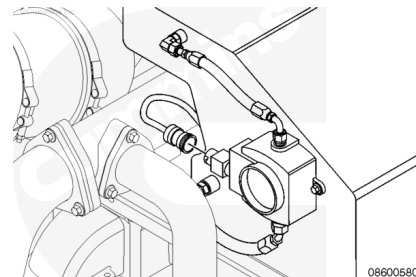

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

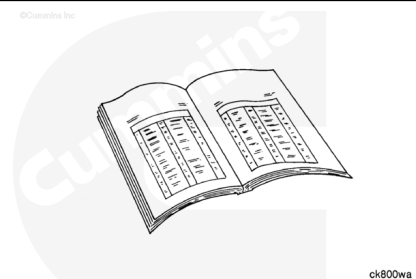

- Connect the batteries or the air supply line to the air starter.
- Fill the cooling system. Refer to Procedure 008-018 (Cooling System) in Section 8.
(/qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html)

