

Trainings ▾

Preparatory Steps

QSK60 Marine Applications


- Drain the coolant. Refer to Procedure 008-018 (Cooling System) in Section 8.
(/qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html)
- Remove the aftercooler heat shields. Refer to Procedure 010-129 (Aftercooler Heat Shield) in Section 10.
(/qs3/pubsys2/xml/en/procedures/56/56-010-129-tr.html)




Remove

QSK60 Marine Applications


Remove any vessel plumbing, such as a Mercer connector and vent lines, from the water manifold. Refer to the proper vessel manufacturer's service manual for instructions.

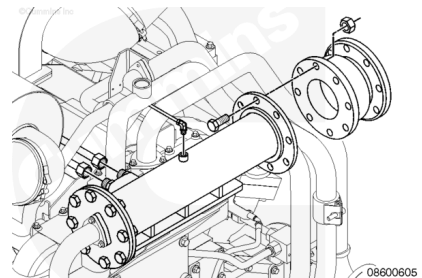


- Remove the three capscrews securing the jacket water bypass line to the water manifold.

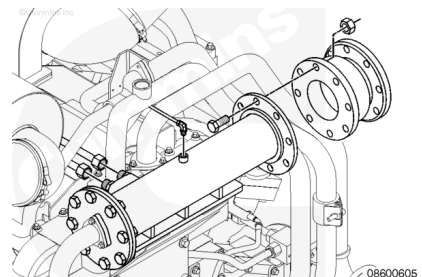

- Remove the three capscrews securing the jacket water bypass line to the water manifold.

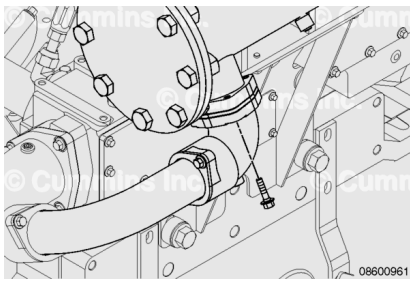


Remove the three capscrews in each of the two outlet pipes.
Discard the gaskets.

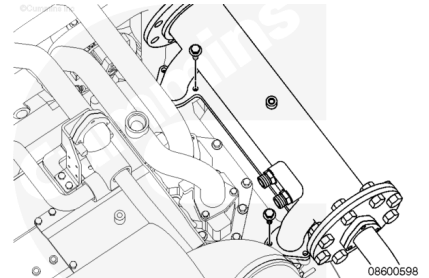


⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

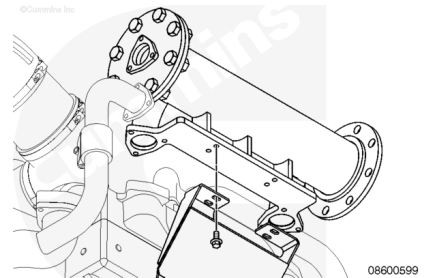

Remove the four capscrews securing the water manifold to the support bracket.
Remove the water manifold.


Remove the capscrews securing the support bracket to the engine.

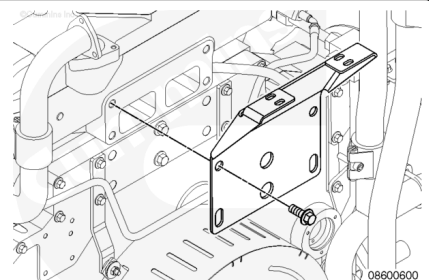

Clean and Inspect for Reuse

QSK60 Marine Applications


Clean the water manifold.

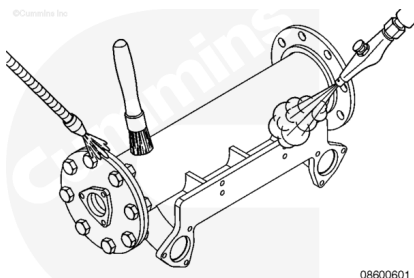

08600601

Inspect the water manifold for cracks and visible leaks.

Replace the water manifold, if necessary.

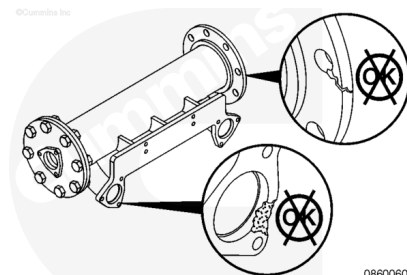


08600602

Install

QSK60 Marine Applications

The bottom four capscrews securing the support bracket require a round spacer under the capscrew head.


Install the capscrews securing the support bracket to the engine. Do **not** tighten the capscrews at this time.

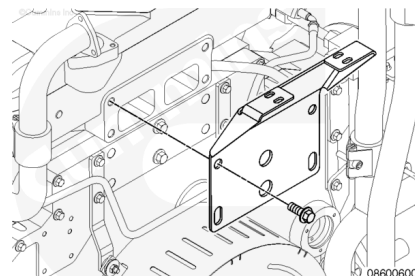

08600600

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

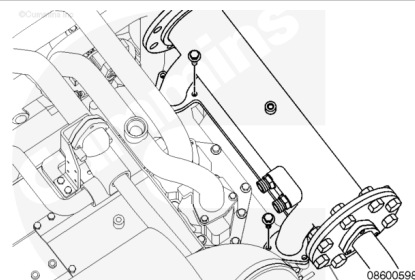

08600598

Fit the water manifold onto the support bracket.


Install the new gaskets for the water outlet pipes.

Install the three capscrews securing each of the two water manifold outlet pipes to the thermostat housing.

Torque Value: 47 n•m [35 ft-lb]

Install the four capscrews securing the water manifold to the support bracket.


Torque Value: 47 n•m [35 ft-lb]

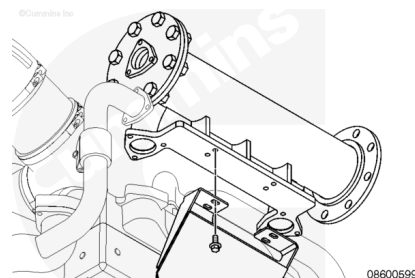

08600599

- Install the three capscrews securing the jacket water bypass line to the water manifold.


Torque Value: 45 n•m [33 ft-lb]

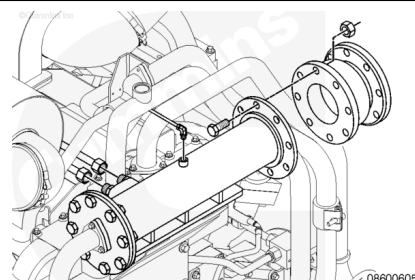

08600605

- Install the three capscrews securing the jacket water bypass line to the water manifold.


Torque Value: 45 n•m [33 ft-lb]

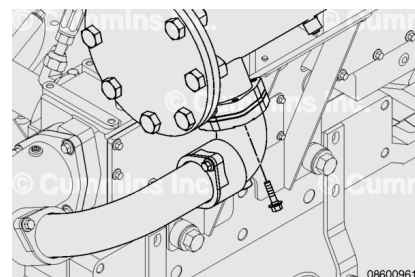

08600961

Tighten the six capscrews securing the support bracket to the engine.


Torque Value: 550 n•m [406 ft-lb]

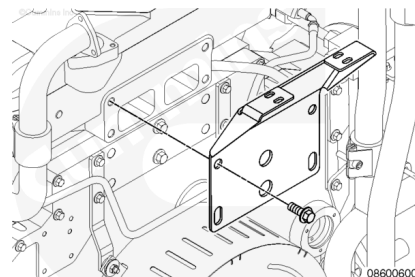

08600600

Install any vessel plumbing, such as a Mercer™ connector and vent lines, to the water manifold.

Refer to the proper vessel manufacturer's service manual for torque specifications.

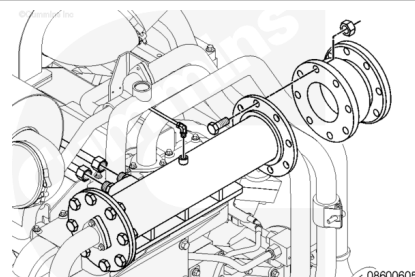


08600605

Finishing Steps

QSK60 Marine Applications

- Install the aftercooler heat shields. Refer to Procedure 010-129 (Aftercooler Heat Shield) in Section 10. (</qs3/pubsys2/xml/en/procedures/56/56-010-129-tr.html>).
- Add coolant to engine and check for leaks. Refer to Procedure 008-018 (Cooling System) in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html>)

©Cummins Inc.

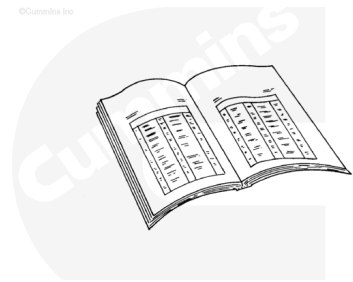

ck800wa