

Trainings ▾


Install

Use vegetable oil to lubricate the o-ring (4). Do **not** use petroleum-based oil as this will cause swelling of the o-rings.

Install the water tube (3) into the water manifold.

Install the retaining clamp (2) and capscrew (1).


Torque Value: 45 n•m [33 ft-lb]

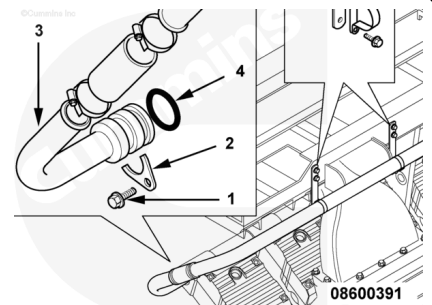

Install the water transfer tubes assembly (2) into the 4-way water manifold (3) behind the thermostat housing near the number 1 cylinder.


Tighten the hose clamps (1).

Torque Value: 5 n•m [44 in-lb]

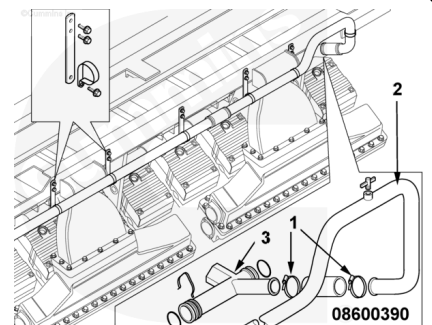


Install the p-clip (1), capscrew (2), and spacer (3) that mount the water transfer tubes assembly to the 2-stage frame.

Torque Value: 45 n•m [33 ft-lb]

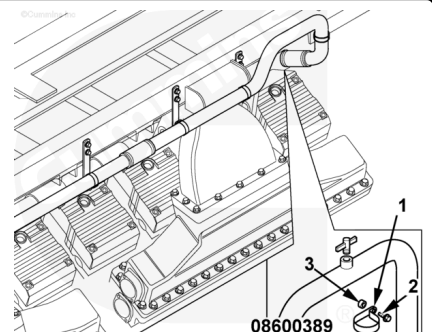

Install the p-clips (1), capscrews (2), and nuts (3) that mount the water transfer tubes assembly to the 2-stage frame.

Torque Value: 45 n•m [33 ft-lb]

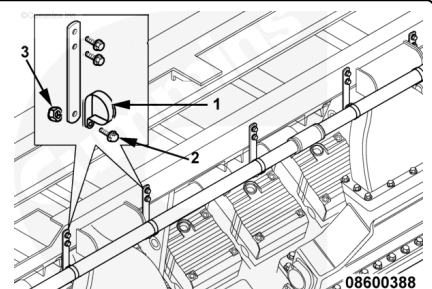

Last Modified: 09-Dec-2003
