


Trainings ▾

Install

with Mechanically Actuated Injector

⚠ CAUTION ⚠

Do not use sealants on the gasket. The gasket is manufactured from material that sealants will damage.

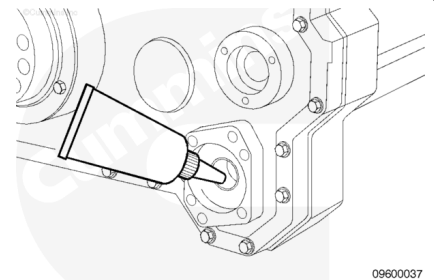


Lubricate the bushing in the front gear housing cover with Lubriplate™ 105.

Install the gasket onto the pilot of the drive housing cover.

There is **not** a requirement to align the index on the drive gear with the marks on the camshaft gear on QSK45 and QSK60 engines.

Install the accessory drive assembly, turning the shaft as necessary to engage the gears.

Install and tighten the six capscrews.

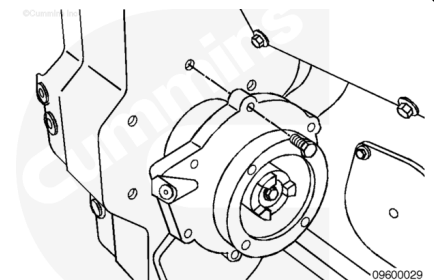

Torque Value: 45 n•m [33 ft-lb]

With the accessory drive installed, measure the end clearance.

Accessory Drive End Clearance		
mm		in
0.13	MIN	0.0051
0.29	MAX	0.0114

