


Trainings ▾

Remove

⚠ CAUTION ⚠

Improper use of the standard puller, Part Number ST-647, will damage the internal threads of the accessory driveshaft.

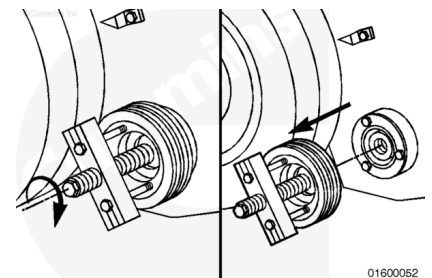

Use a standard puller, Part Number ST-647, or equivalent, to remove the accessory drive pulley.

Remove and discard oil seal sleeve from pulley.

Remove and discard oil seal. Refer to Procedure 001-003 in Section 1. (</qs3/pubsys2/xml/en/procedures/56/56-001-003-tr.html>)

