

Trainings ▾

Install

with Mechanically Actuated Injector

Lubricate the bushing in the front gear housing cover with Lubriplate™ 105, Part Number 3163086, 3163087, or equivalent.


Install the gasket on the drive pilot.

Install the pump drive, allowing the gear to turn as it meshes with the idler gear.

Align the capscrew holes, and install the six water pump drive mounting capscrews.

Tighten the six capscrews.

Torque Value: 45 n•m [33 ft-lb]

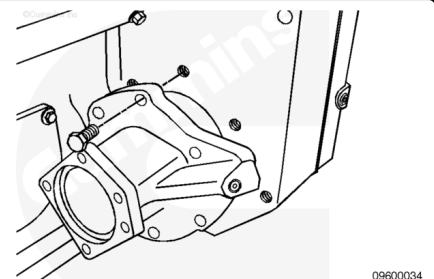

Measure the water pump drive end clearance after the drive has been installed.

Water Pump Drive End Clearance - Installed		
mm		in
0.05	MIN	0.0020
0.21	MAX	0.0083

