


Trainings ▾

Remove


Remove the accessory drive cover using a rubber mallet.

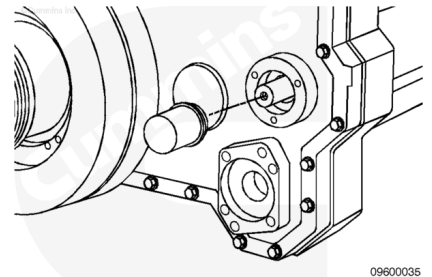

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

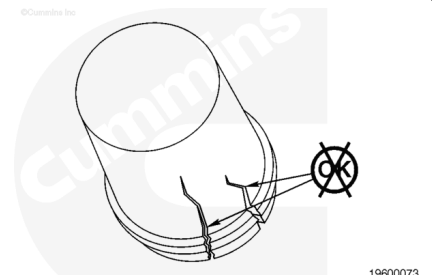

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the cover with solvent and dry with compressed air.

Inspect the cover for cracks and damage.

Replace the cover if cracked or damaged.

Install

The cover is installed **only** if the accessory drive does **not** have a pulley.

Use Loctite® 675 sealant, Part Number 3377132. Apply a bead of sealant to the portion of the cover that will be in the bore of the front cover. Position the cover in the bore.

Do **not** bend the cover when pushing it into the bore. If the cover is bent, an oil leak will result.

Use a mallet. Push the cover into the bore until the step on the cover touches the front gear housing. Check to make sure the cover is straight in the bore.

