

Trainings ▾

Remove

QSK45 Engines


Loosen the hose clamps (19) between the air crossover (17) and the turbocharger.

Loosen the hose clamps (15) between the T-connection (13) and the aftercooler.

Remove the V-band clamp (18) between the air crossover and the T-connection. Pull the air crossover and the hose (16) from the turbocharger. Push the hose (12) on the T-connection (13) as far as possible.

Remove the four capscrews. Remove the T-connection and gasket (14). Remove the hose from the connection.


Discard the gasket.

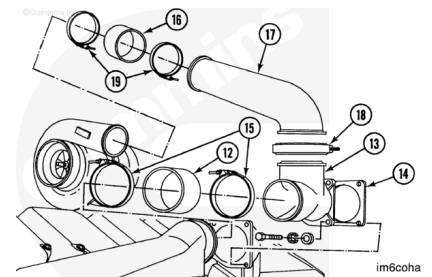

Note : Procedures for one side of the engine are shown. Procedures for the other side are similar.


Remove the three hose clamps from the rubber T-connection.

Remove the rubber T-connection.

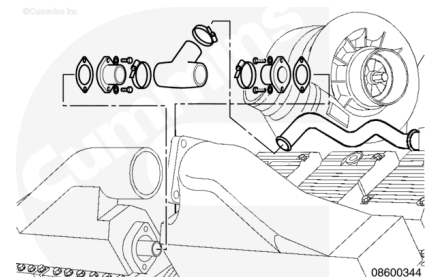


Remove the capscrews, seal retainers, gaskets, and seals from each aftercooler.

Discard the seals and gaskets.

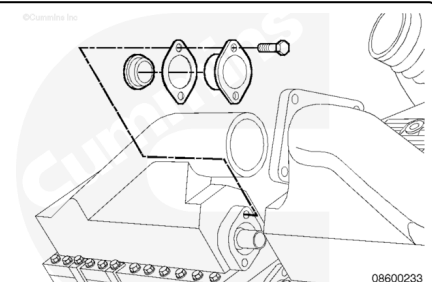


Remove the intake manifold pressure sensor.

Remove the intake manifold temperature sensor.

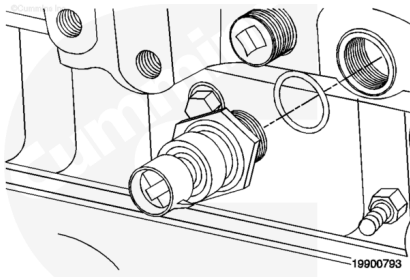

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

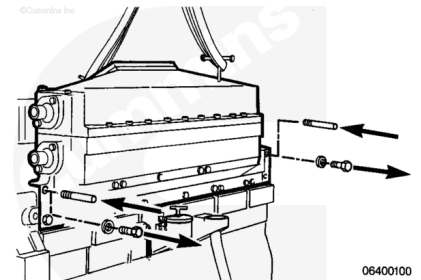

Remove two of the aftercooler mounting capscrews.

Install two guide studs. Use a hoist, two T-handles, and a lifting sling.

Attach the T-handles, sling, and hoist. Raise the hoist until there is tension on the sling.

Remove the remaining ten capscrews.


Remove the aftercooler assembly.

Discard the intake gaskets.

QSK60 Engines

Note : The QSK60 engine contains an individual air crossover for each aftercooler. The configuration of the left-bank front and right-bank rear air crossovers are different from those used on the right-bank front and left-bank rear, but the removal procedures are the same.

Note : Engines using high pressure ratio compressor turbochargers use different air crossovers to verify alignment.

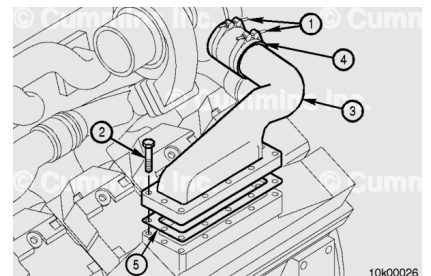

Loosen the two hose clamps (1) between the turbocharger and the air crossover (3).

Remove the twelve capscrews (2) from the air crossover.


Remove the air crossover (3), gasket (5), and hose (4) from the turbocharger and aftercooler.

Discard the gasket.

Note : Procedures for one side of the engine are shown. Procedures for the other side are similar.


Remove the three hose clamps from the rubber tee.

Remove the rubber T-connection.

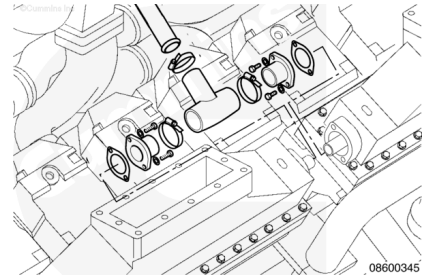


Remove the capscrews, seal retainers, gaskets, and seals from each aftercooler.

Discard the seals and gaskets.

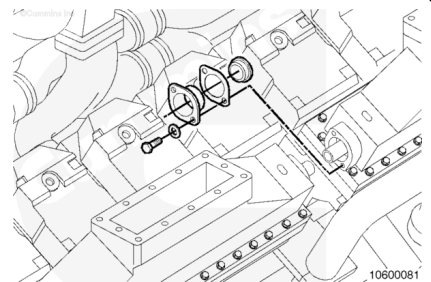


Remove the intake manifold pressure sensor.

Remove the intake manifold temperature sensor.

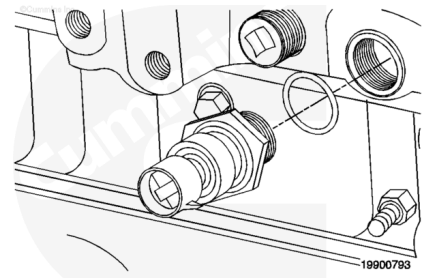

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

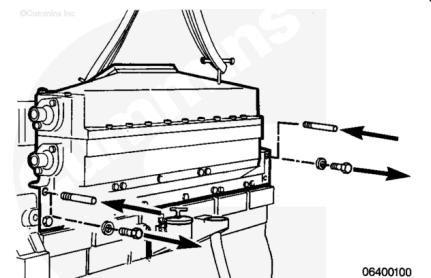

Due to the weight of the cast iron assembly, it **must** be disassembled as it is removed, if a hoist can **not** be used. Go to the Disassemble section of this procedure.

With an aluminum assembly, remove two of the aftercooler mounting capscrews.

Install two guide studs. Use a hoist, two T-handles, and a lifting sling.

Attach the T-handles, sling, and hoist. Raise the hoist until there is tension on the sling.

Remove the remaining ten capscrews

Remove the aftercooler assembly.

Discard the intake gaskets.

Last Modified: 01-Mar-2023
