


Trainings ▾

Measure

Connect a pressure gauge in the exhaust piping. The gauge **must** have a capacity of 160 mm Hg [6 in Hg].

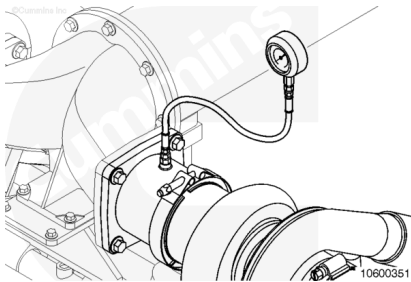


The pressure gauge adapter, or fitting, **must** be installed at a 90-degree angle to the exhaust flow in a straight section of pipe. The adapter location **must** be a minimum of 254 mm [10 in] after the turbocharger.

The adapter **must not** extend through the wall of the exhaust tubing.

If the adapter **must** be located in a curved section of tubing, locate it on the flat side of the curve, **not** in the radius, or the measured value will **not** be accurate.

Connect a 305 mm [12 in] piece of metal tubing between the gauge adapter and the gauge hose. This will prevent damage to the hose from extreme heat.

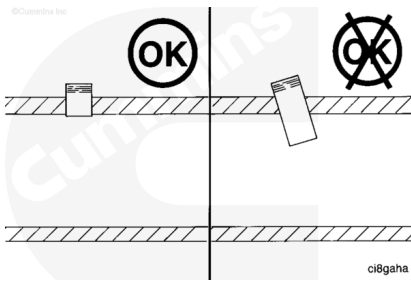


Operate the engine at rated rpm and load; record the manometer reading.

Exhaust Restriction - QSK45 and QSK60 Single Stage
and QSK60 Marine

mm-hg		in-hg
75	MAX	3.0

Exhaust Restriction - QSK60 Two Stage


mm-hg		in-hg
50	MAX	2.0

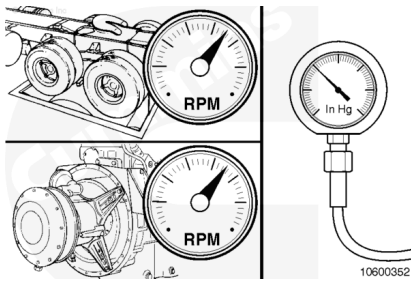

Stall speed is **not** full power.

If the exhaust restriction exceeds the specification, inspect the exhaust piping for damage. Refer to the OEM's instructions.

If damage is **not** visible, check the size and routing of the exhaust piping. Refer to the installation recommendation bulletin.

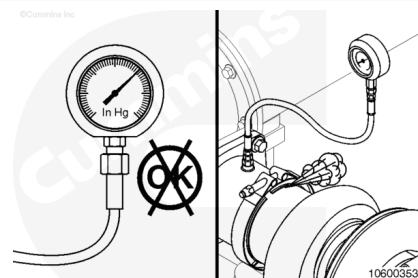

Remove the test equipment.

