

Trainings ▾


Remove

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

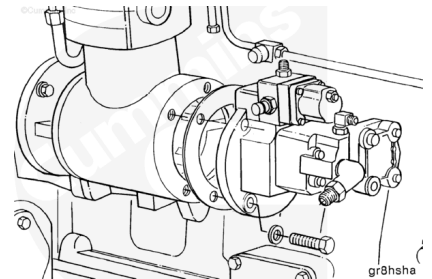


Use steam to clean the air compressor.

Dry with compressed air.

Remove the coolant lines from the air compressor.

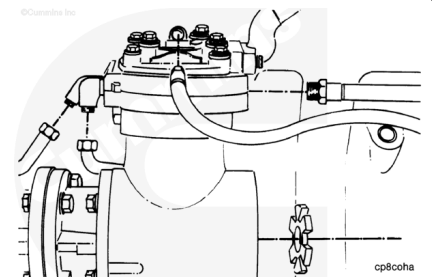


Remove the air inlet and outlet connections from the air compressor.

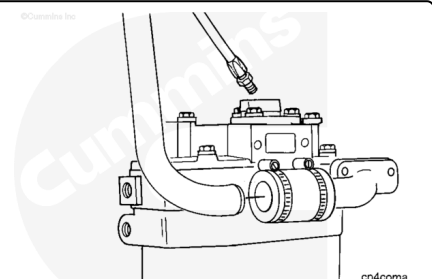

Single Cylinder

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury use a hoist or get assistance to lift this component.

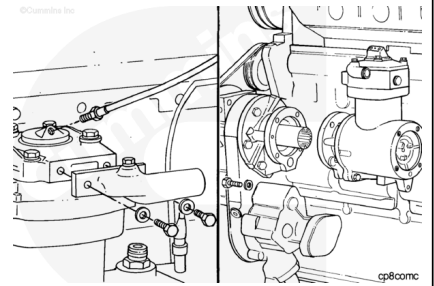

Remove the air compressor support bracket and capscrews.

Remove the air compressor mounting flange capscrews.

Remove the air compressor.


Remove the splined coupling.

Remove and discard the gasket.

Twin Cylinder

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury use a hoist or get assistance to lift this component.

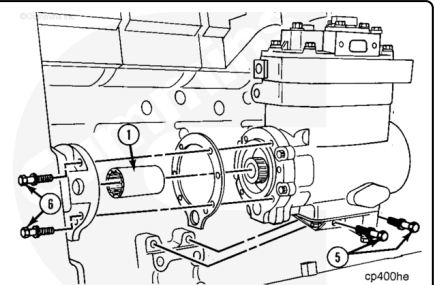

Remove the air compressor support mounting capscrews (5).

Remove the air compressor mounting flange capscrews (6).

Remove the air compressor.

Remove the splined coupling (1).

Remove and discard the gasket.

Remove the cover plate/support bracket from the air compressor.

