


Trainings ▾


General Information

The compressed air system normally consists of a gear-driven air compressor, an air governor, air tanks, and all necessary plumbing.


The Holset® single- and two-cylinder air compressors are engine-driven, piston-type compressors that supply compressed air to operate air-activated devices. The compressor runs continuously but has a loaded and unloaded operating mode.

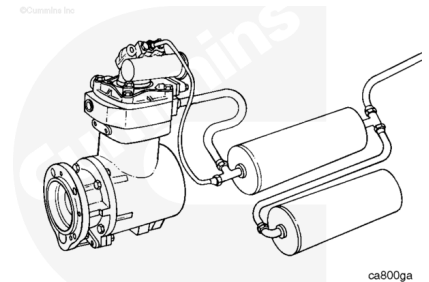


The illustration shows the air flow in the compressed air system with an air dryer.

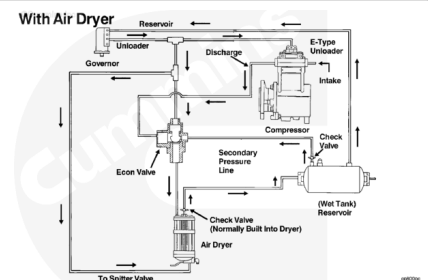

The illustration shows the air flow in the compressed air system without an air dryer.

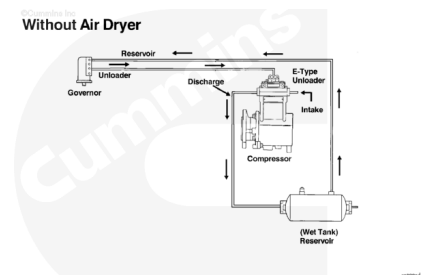

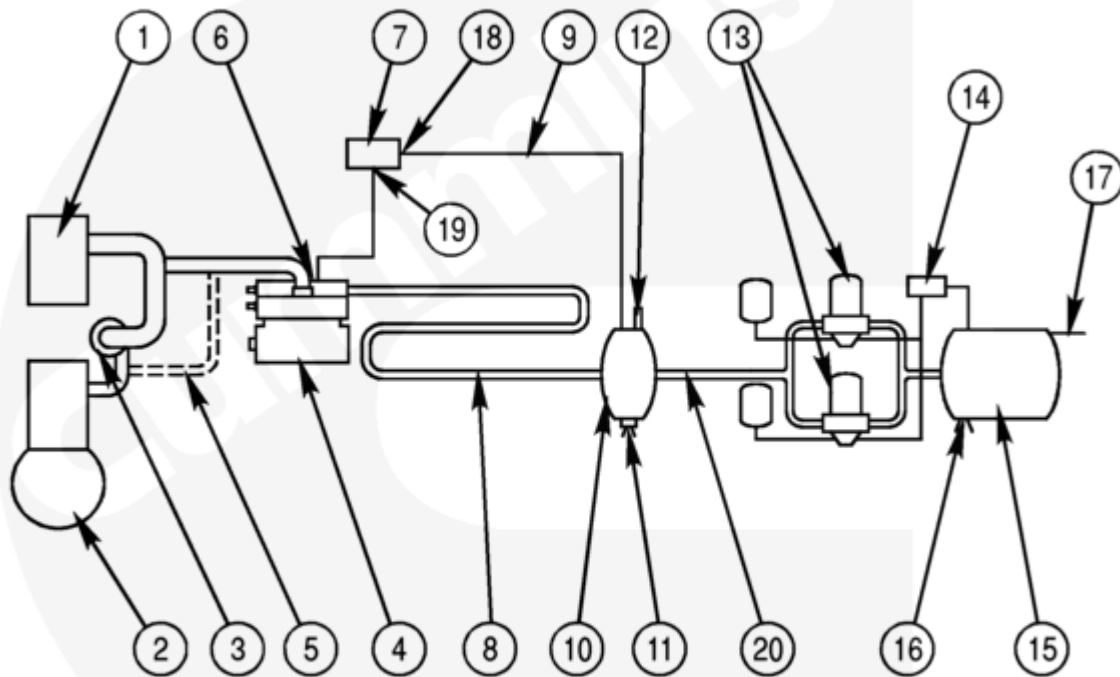

12800039

Typical Schematic for Twin-Cylinder Air Compressor

1. Engine air filter
2. Engine
3. Turbocharger
4. Holset® ST compressor
5. Optional turbocharger inlet
6. Center unloader valve (standard)
7. Compressor governor
8. Exhaust line from compressor to receiver tank
9. Line from governor RES port to receiver tank
10. Receiver tank
11. Heated splitter valve
12. Safety valve
13. Turbocharger 2000 air filters
14. Air governor
15. Supply tank
16. Splitter valve
17. Maximum system use
18. Governor RES port
19. Governor unload port
20. Nominal line.

The **only** air compressors used on QSK45 and QSK60 engines are the two-cylinder, 14.2 liter each second [30 cfm] compressor and the 7.1 liter each second [15 cfm] compressor. For the complete rebuild instructions of the compressors, refer to the Master Repair Manual, Holset® Air

Compressors Manual, Bulletin 3666121.

For complete rebuild instructions for other air compressors, refer to the original equipment manufacturer.

The following companies are suppliers of air compressors used on QSK45 and QSK60 engines:

Holset® Engineering Co., Inc.

1320 Kemper Meadow Drive

Suite 500

Cincinnati, OH 45240

U.S.A.

Telephone: (513) 825-9600

The two-cylinder compressor **must** receive filtered air. The compressor **must** be plumbed to the air intake pipe of an engine, before the turbocharger, or through a filter attached to the compressor. The air inlet **must not** be plumbed to the air manifold of an engine.

Cummins, Inc. does **not** manufacture air starters.

For rebuild instructions regarding air starters, refer to the equipment manufacturer.

The following list contains the addresses of suppliers of air starters used on Cummins engines:

Ingersoll-Rand Engine Starting Systems

888 Industrial Drive

Elmhurst, IL 60126

U.S.A.

Telephone: (312) 530-3800

Ingersoll-Rand Sales Company, Ltd.

Bowater House

Knightsbridge

London, - SW1X 7LU

England

Telephone: 44 1 584-5070