


Trainings ▾


Disassemble

Remove the four end cover capscrews.

Remove the end cover.

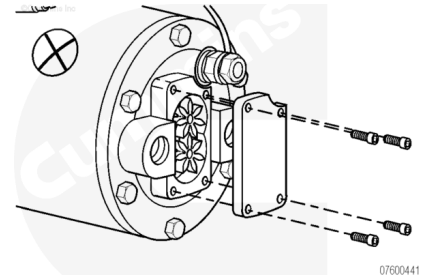


Slide the two pumping gears off the shafts.

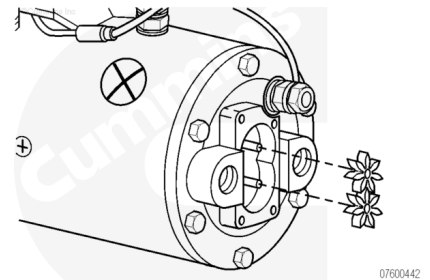

Inspect for Reuse


Inspect the gears for cracks, chipped or broken teeth.

If the gears are damaged, the gears **must** be replaced.

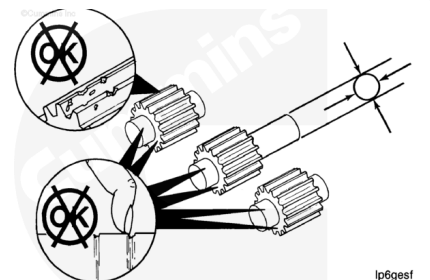

Inspect the gear, shaft, and bushing for wear or damage.


Note : A pipe plug **must** be removed to lubricate the bushing on some starter motors.

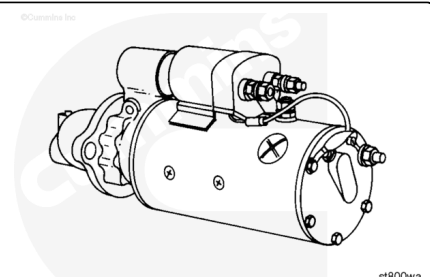

Assemble

Lubricate the gears with clean engine oil.

Slide the gears onto the shafts.

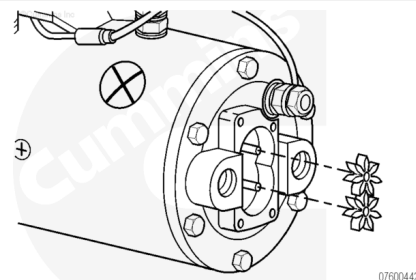


Install the cover plate.

Install the four cover plate capscrews.

Tighten the capscrews.


Torque Value: 18 n•m [159 in-lb]

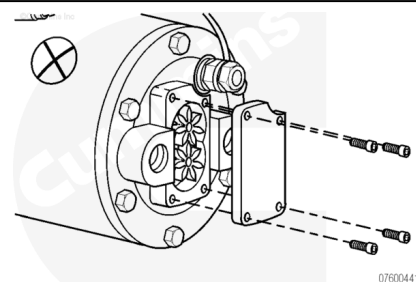

Install

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get personal assistance to lift this assembly.

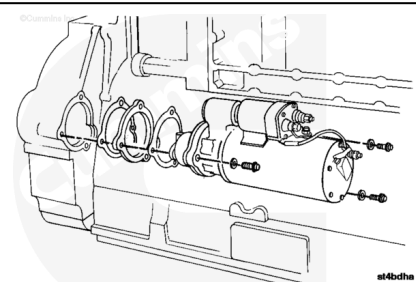

Note : Not all engines use spacers.

Note : The wet type of flywheel housing requires gaskets for the starting motor.

Install any spacer or gaskets.

Install the starting motor and capscrews.

Torque Value:


With Cast-Iron Flywheel Housing

1. 180 n•m [133 ft-lb]

Integral Prelub™ Starter

Install the suction hose (1) to the fittings (3) on the back of the integral prelube starter. Install the other end of the suction hose to the suction hose of the oil pump.

Install the supply hose (2) to the fittings (3) on the back of the prelube starter. Install the other end of the supply hose to the oil filter head.

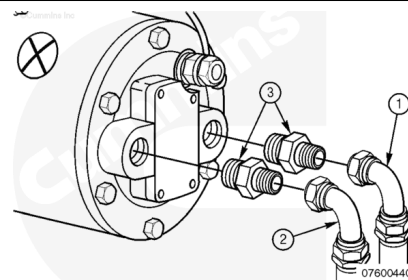

Install the electrical connections to the starting motor.

