


Trainings ▾

Remove

Remove the drive belt.

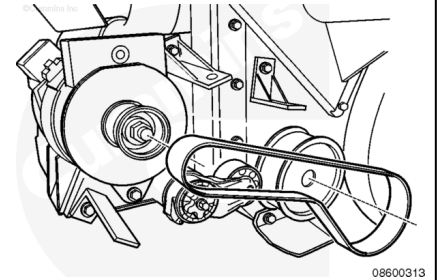

Remove the belt tensioner capscrew and the belt tensioner.

