

Trainings ▾

Preparatory Steps


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. Refer to Procedure 013-001 in Section 13.
(</qs3/pubsys2/xml/en/procedures/56/56-013-001-tr.html>)

Remove

Remove the rear cover plate.

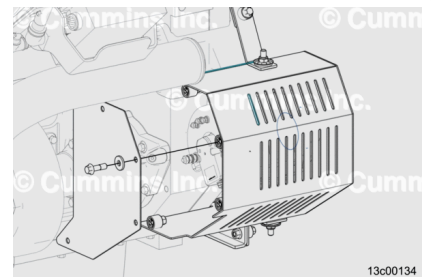


Remove alternator guard. Verify mounting brackets remain fixed to the alternator guard.

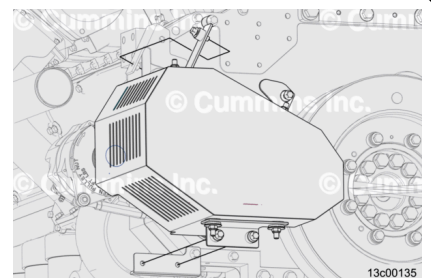


Remove upper and lower mounting brackets from the front cover of the engine. Verify the three front gear cover capscrews (1) are installed.

Torque Value: 80 n•m [59 ft-lb]

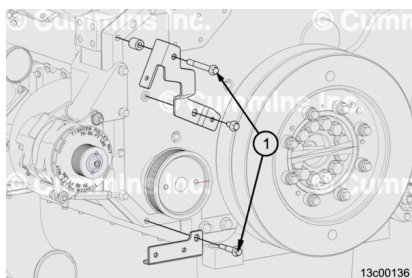

Disassemble


Remove lock nuts (1), washers (2), vibration isolators (3) and alternator guard brackets (4) from all studs on alternator guard.

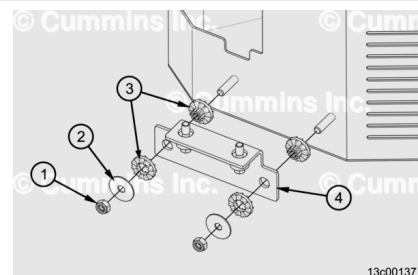

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

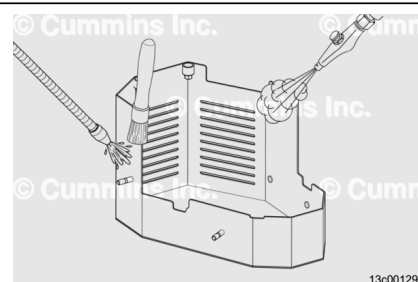

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying dirt and debris can cause personal injury.

Clean alternator guard. Use solvent or steam. Dry with compressed air.

Inspect alternator guard.

Replace alternator guard if:


- Cracked
- Threads corroded
- Otherwise damaged.

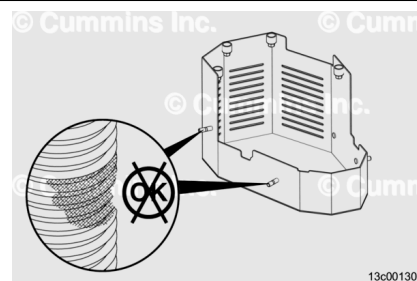

Inspect alternator guard mounting bracket.

Replace alternator guard mounting bracket if:


- Cracked
- Threads corroded
- Otherwise damaged.

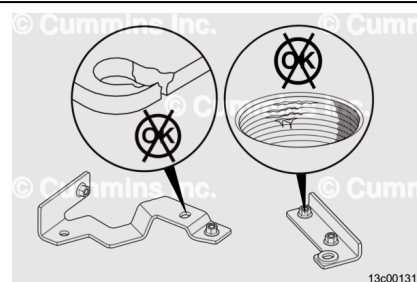

Inspect vibration isolators.

Replace vibration isolator if:


- Cracked
- Worn
- Otherwise damaged.

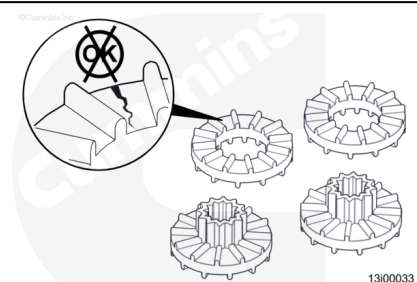

Inspect alternator guard brackets.


Replace bracket if:

- Cracked
- Captive capscrew missing or damaged
- Otherwise damaged.

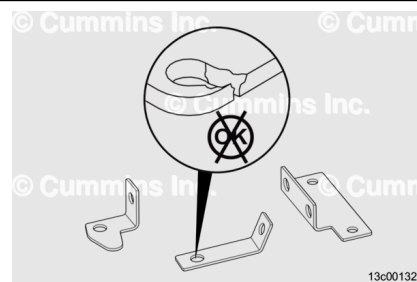

Assemble

Install vibration isolators (3), alternator guard brackets (4), washers (2), and lock nuts (1) onto studs on alternator guard, as shown.

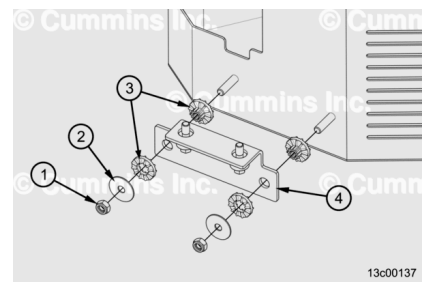

Install


Install upper and lower support brackets. Verify the brackets are installed level.

Install and tighten the long capscrews (1).

Torque Value: 80 n•m [59 ft-lb]


Install and tighten the short capscrew.

Torque Value: 45 n•m [33 ft-lb]

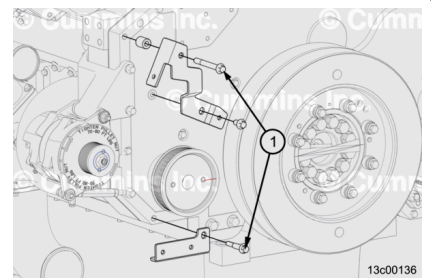

Position the alternator guard in line with the upper and lower support brackets. Secure the guard with capscrews.


Torque Value: 45 n•m [33 ft-lb]

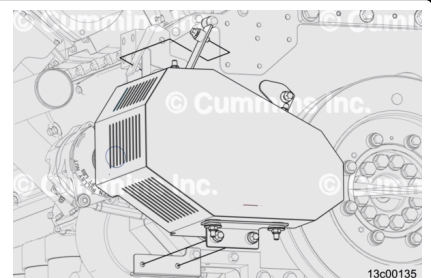

Install the rear cover to the alternator guard using 4 capscrews.

Torque Value:

Alternator guard rear cover 45 n•m [33 ft-lb]

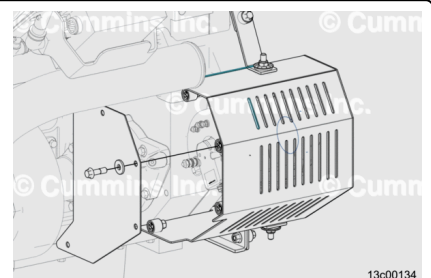

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. Refer to Procedure 013-001 in Section 13.
(</qs3/pubsys2/xml/en/procedures/56/56-013-001-tr.html>)