


Trainings ▾

Install

⚠ CAUTION ⚠

Do not paint the back side of the ECM. Make sure no grease or dirt is between the ECM and the cooling plate. Failure to do so can result in ECM damage.

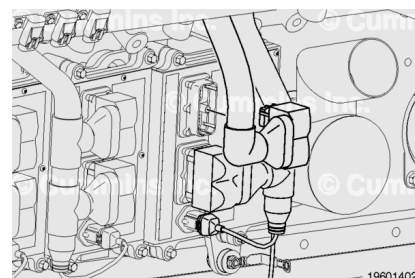


Install the new ECM to the ECM bracket.

Tighten the capscrews.

Torque Value: 18 n•m [159 in-lb]

⚠ CAUTION ⚠

Do not blow compressed air into the ECM ports or connectors. Compressed air can contain moisture due to condensation.

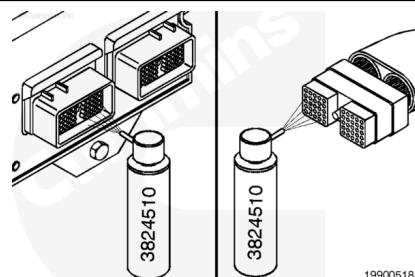

Note : When an ECM is replaced, the new ECM must be calibrated. Refer to Procedure 019-032 (ECM Calibration) in Section 19 of the Troubleshooting and Repair Manual, QSK38, QSK50, and QSK60 (CM850 Modular Common Rail System), Bulletin 4021533. (</qs3/pubsys2/xml/en/procedures/105/105-019-032.html>)

Note : Connect the ECM ground strap to the ECM on marine engine applications.

Use quick-dry electrical contact cleaner, Part Number 3824510, or equivalent, to remove all dirt and moisture from the ECM connector ports and harness connectors. Connect the 4-pin, 50-pin, and 60-pin harness connectors to the ECM.

Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32-in] hex head adapter to tighten the connector jackscrew.

Torque Value: 2.8 n•m [25 in-lb]

Note : Do not over-torque as connector damage can occur.

Last Modified: 17-Apr-2014
